


Johnson motors

**parts
catalog**

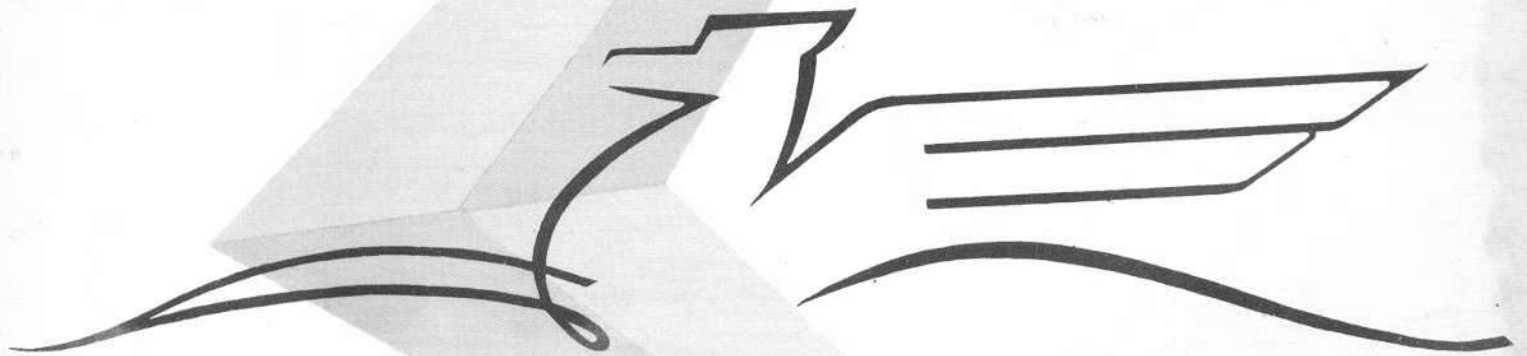

MODELS

 

AD-ADL-10

7½ hp


Distributors for British Columbia
HOFFARS LIMITED
1620 First Ave. West
VANCOUVER 9, - B. C.

PETERBOROUGH, CANADA

SHROUD GROUP

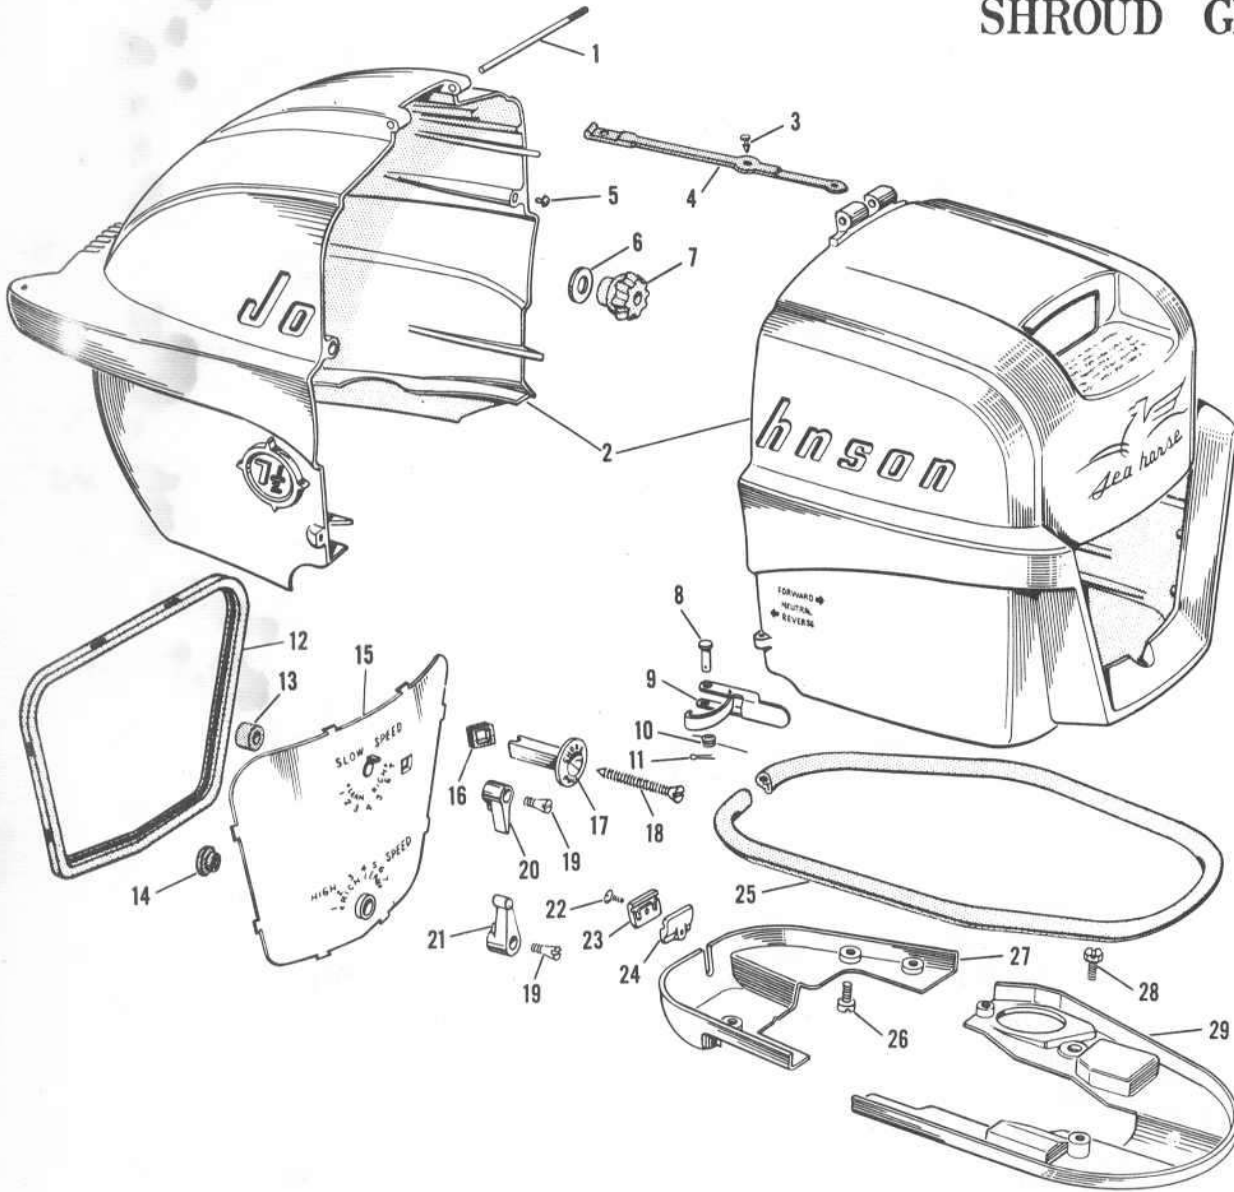





TO START
 1 Shift to Neutral. 2 Connect fuel line.
 3 Pull and hold choke out to left.
 4 Set speed control at Start of pole.
 5 Pull choke out and start.
 Release choke after start.
 Push in and hold in the choke. Adjust the
 SPARK PLUG. Turn the fuel and choke control
 180°. DRZ CONTROL & SPARK PLUG.

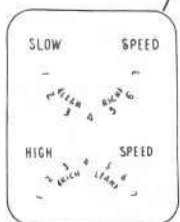

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	303536	Hinge Pin	1
2	376542	Shroud & Transfer Assembly	1
3	304485	Pin	1
4	376627	Strap & Pin Assembly	1
5	203290	Bumper	2
6	303565	Washer	2
7	304461	Bumper	2
8	303522	Pin	2
9	376129	Clamp & Lever Assembly	2
10	303519	Spring	2
11	303590	Cotter Pin	2
12	304303	Grommet	1
13	303532	Sleeve	1
14	303535	Grommet	1
15	376519	Control Panel & Transfer Assembly	1
16	303796	Grommet	1
17	303718	Choke Knob	1
18	302761	Screw	1
19	551517	Screw	2
20	303847	Lever - Slow Speed	1
21	304360	Lever - High Speed	1
22	304022	Screw	1
23	304021	Clamp - Outer	1
24	304020	Clamp - Inner	1
25	304297	Seal	1
26	304013	Screw	6
27	304240	Cover - Lower - Rear	1
28	304015	Screw	1
29	304239	Cover - Lower - Front	1
30	304334	Transfer - Johnson - Port & Starboard	2
31	304383	Medallion - "7-1/2"	2
32	304387	Nut	4
33	304349	Transfer - Gearshift	1
34	304339	Transfer - Sea Horse - Front	1
35	304372	Transfer - Starting	1
36	304307	Transfer - Control Panel	1

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

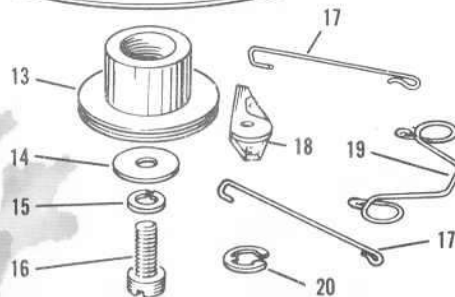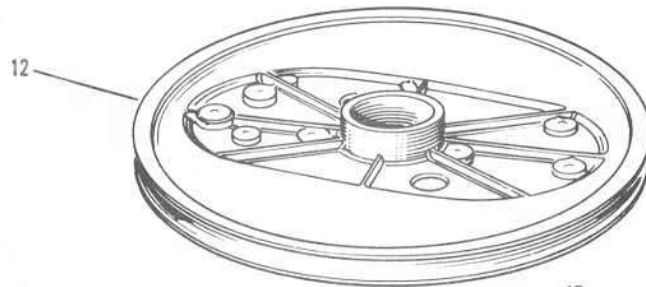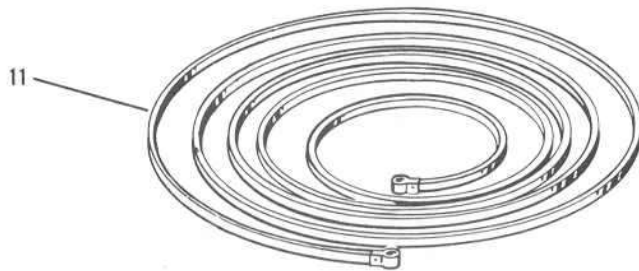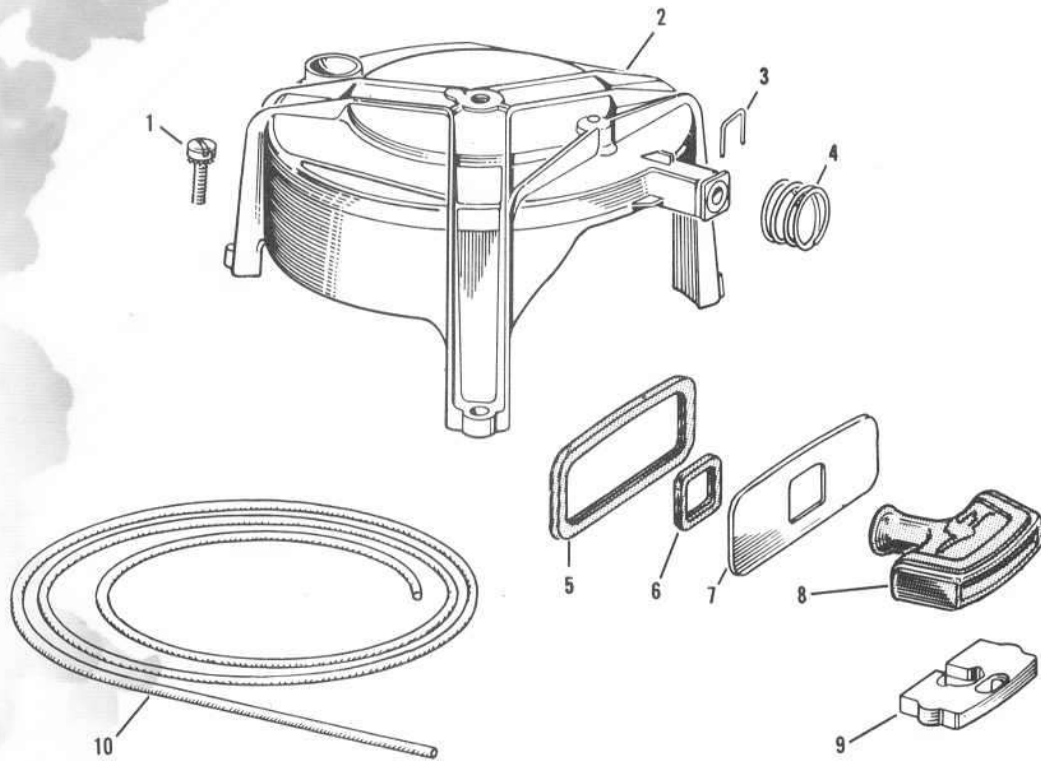


STARTER GROUP

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	303288	Screw	3
2	376669	Starter Housing & Pin Assembly	1
	(376783	Starter Assembly Complete)	1
3	304237	Spring Clip	1
4	304235	Spring	1
5	303529	Grommet	1
6	304236	Grommet	1
7	304238	Cover	1
8	304324	Handle	1
9	304323	Anchor	1
10	203820	Rope	1
11	41-197	Spring	1
12	376670	Starter Pulley & Pin Assembly	1
13	203699	Spindle	1
14	202356	Washer	1
15	13-51	Lockwasher	1
16	13-588	Screw	1
17	203713	Link	2
18	203698	Pawl	1
19	203697	Friction Spring	1
20	203470	Retaining Ring	1

ORDER ALL PARTS FROM YOUR JOHNSON SEA-HORSE DEALER

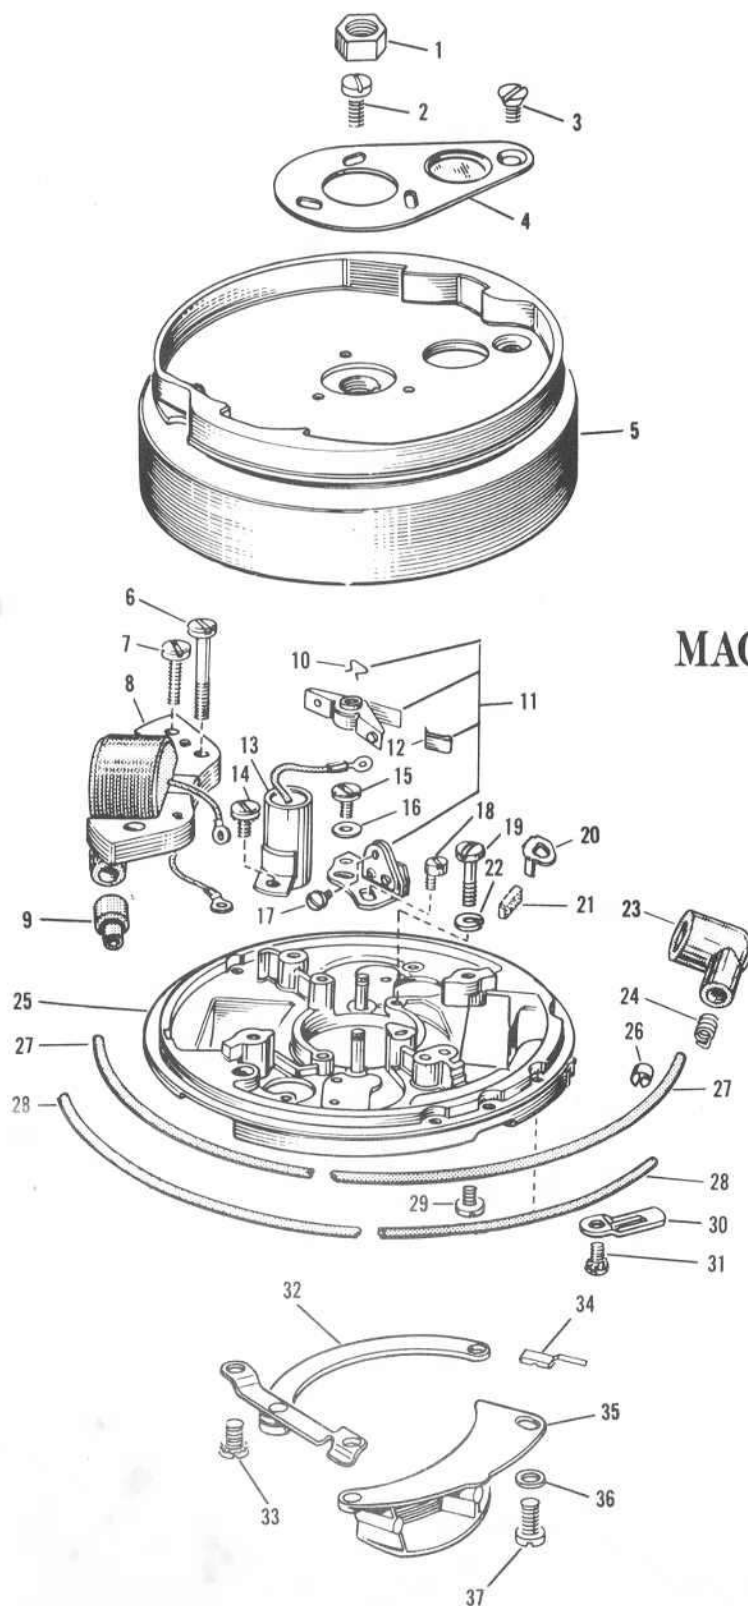

MAGNETO GROUP

BE SURE TO SPECIFY MODEL AND SERIAL NUMBER
OF MOTOR WHEN ORDERING PARTS

PHOTO NO.	PART NO.	NAME OF PART	QTY. PER MOTOR
1	301988	Nut	1
2	203751	Screw	3
3	510293	Screw	1
4	510292	Cover	1
5	580218	Flywheel & Cover Assembly	1
6	510191	Screw	2
7	510195	Screw	4
8	580118	Coil & Lamination Assembly	2
9	510289	Grommet	2
10	71-1052	Spring Clip	2
11	580148	Breaker Point Assembly	2
12	510204	Clip	2
13	510173	Condenser	2
14	510193	Screw	3
15	510278	Screw	4
16	510208	Bow Washer	2
17	510194	Screw	2
18	510185	Eccentric Screw	2
19	510192	Screw	2
20	510188	Oiler Clip	1
21	510189	Oiler Wick	1
22	3-28	Lockwasher	2
23	510232	Cover	2
24	510231	Spring Terminal	2
25	580210	Armature Plate & Post Assembly	1
	(580219	Armature Plate Assembly)	1
26	120783	Marker	1
27	580178	High Tension Lead - Upper with Terminal	1
28	580179	High Tension Lead - Lower with Terminal	1
29	510278	Screw	4
30	510259	Clamp	1
31	510193	Screw	3
32	376064	Plate & Link Assembly	1
33	510193	Screw	2
34	303146	Spring Clip	1
35	203888	Cam	1
36	303952	Washer	4
37	302750	Screw	2