

5D15 Applications

**This Parts Book Covers the Following
Motors Manufactured by Gale Products**

Montgomery Ward "Sea King"

GG-8977A

Goodyear "Sea Bee"

225-3621 5D15G

Gale Products "Buccaneer"

5D15B

Spiegel "Brooklure"

50Z3324

TRIM GROUP PART NUMBER VARIATIONS

3 H.P. DELUXE

Ref. No.	Ward GG-8962A	Gale 3D15B	Spiegel 50Z3323	Goodyear 3D15G
3	592606	592608	591736	592607
26	592592	592596	551429	592594
27	592591	592595	551430	592593
34	592601	592603	591743	592602

5 H.P. STANDARD

Ref. No.	Ward GG-8963A	Gale 5S14B	Spiegel 5S14S	Goodyear 5S14G
23	592597	592079	592091	592093
24	592598	592090	592092	592094
35	592604	592126	592125	592127

5 H.P. DELUXE

Ref. No.	Ward GG-8977A	Gale 5D15B	Spiegel 50Z3324	Goodyear 5D15G
2	592645	592651	592647	592649
3	-	553516	552415	553517
4	304892	553507	-	553507
5	-	-	550961	-
6	553259	553287	552413	553565
7	553505	-	-	-
8	553581	-	-	-
9	553248	-	-	-
10	592644	592650	592648	592646
13	553258	553286	552412	553264
14	553247	-	-	-
15	592664	592667	592666	592665
16	-	-	-	553506
17	-	553517	-	-
18	-	553516	-	-
19	553256	553284	-	-
20	553516	-	-	553516
21	553507	-	-	553507
22	553511	-	-	-
23	-	553507	-	-
24	553336	-	-	553508
25	553257	553285	-	-

12 H.P. STANDARD

Ref. No.	Ward GG-8978A	Gale 12S15B		
*	592609	592078		
27	592600	592611		
28	552198	552224		
29	552226	552197		
30	552223	552233		
31	552851	552217		
32	592599	592610		
33	552850	552216		
38	592605	592130		

12 H.P. DELUXE

Ref. No.	Ward GG-8981A	Gale 12D17B	Spiegel 50Z3325	Goodyear 12D17G
2	592619	592625	592623	592621
3	552654	552654	552224	552654
5	304892	553507	-	553507
6	-	553516	552223	553517
7	553254	553283	552247	553263
8	553505	-	-	-
9	553504	-	-	-
10	553244	-	-	-
11	592618	592624	592622	592620
12	-	-	550961	-
13	553253	553282	552246	553262
14	553243	-	-	-
15	592614	592617	591724	592618
16	-	553517	-	-
17	553252	553281	-	-
18	553251	553280	-	-
19	-	553516	-	-
20	-	553507	-	-
21	553507	-	-	553507
22	553516	-	-	553516
23	553511	-	-	-
24	553335	-	-	553508
25	-	-	-	553506


25 H.P. DELUXE

Ref. No.	Ward GG-8985A	Gale 22D15B	Spiegel	Goodyear 22D15G
2	553653	592663	592659	592657
5	304892	553507	-	553507
6	553203	553291	552525	553261
7	553505	-	-	-
8	553504	-	-	-
9	553246	-	-	-
10	-	-	552415	-
11	-	553516	-	553517
12	592652	592662	592658	592656
13	-	553507	-	-
14	-	-	-	-
15	553202	553290	552524	553260
16	553245	-	-	-
17	592668	592671	591779	592669
18	553205	553289	-	-
19	553204	553288	-	-
20	553516	-	-	553516
21	553507	-	-	553507
22	553511	-	-	-
23	553334	-	-	553508
24	-	-	-	553506
25	-	553517	-	-
26	-	304785	-	-
27	-	553497	-	-
28	-	553516	-	-
29	-	553507	-	-

TRIM GROUP

Parts List

5D15

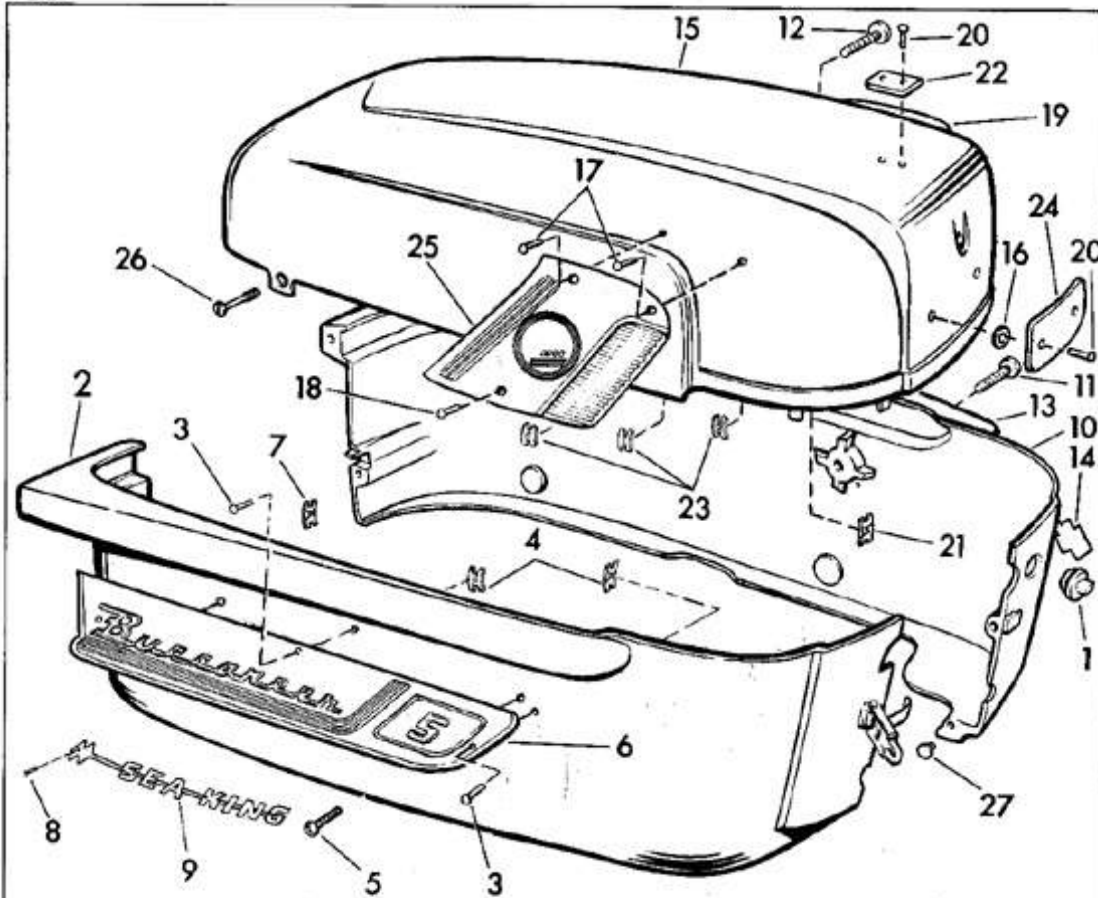


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	203308	Grommet - Choke Knob	13	†	Applique - Port Shroud
2	†	Shroud and Transfer Assy. - Starboard	14	†	Nameplate - Sea King - Port
3	†	Pin or Screw - Applique to Shroud	15	†	Shroud and Transfer Assembly, Top
4	†	Fastener - Applique Pin	16	†	Spacer - Medallion to Shroud
5	†	Screw - Large Applique to Shroud - Starboard	17	†	Pin - Appliques
6	†	Applique Starboard Shroud	18	†	Pin - Applique to Shroud
7	†	Fastener - Nameplate Pin	19	†	Applique - Port, Top Shroud
8	†	Pin - Nameplate	20	†	Pin - Medallion to Shroud
9	†	Nameplate - Sea King - Starboard	21	†	Fastener - Medallion
10	†	Shroud and Transfer Assy. - Port (Incl. 3, 4, 7 and 8)	22	†	Medallion Trident
11	552416	Screw - Shroud - Port, Front	23	†	Fastener - Applique Pin
12	552224	Screw - Shroud - Port, Rear	24	†	Medallion - Top Shroud, Front
			25	†	Applique - Starboard, Top Shroud
			26	552654	Screw - Top Shroud
			27	203290	Bumper - Shroud

† SEE PAGE 1 FOR PART NUMBER

STARTER GROUP


Parts List

5D15

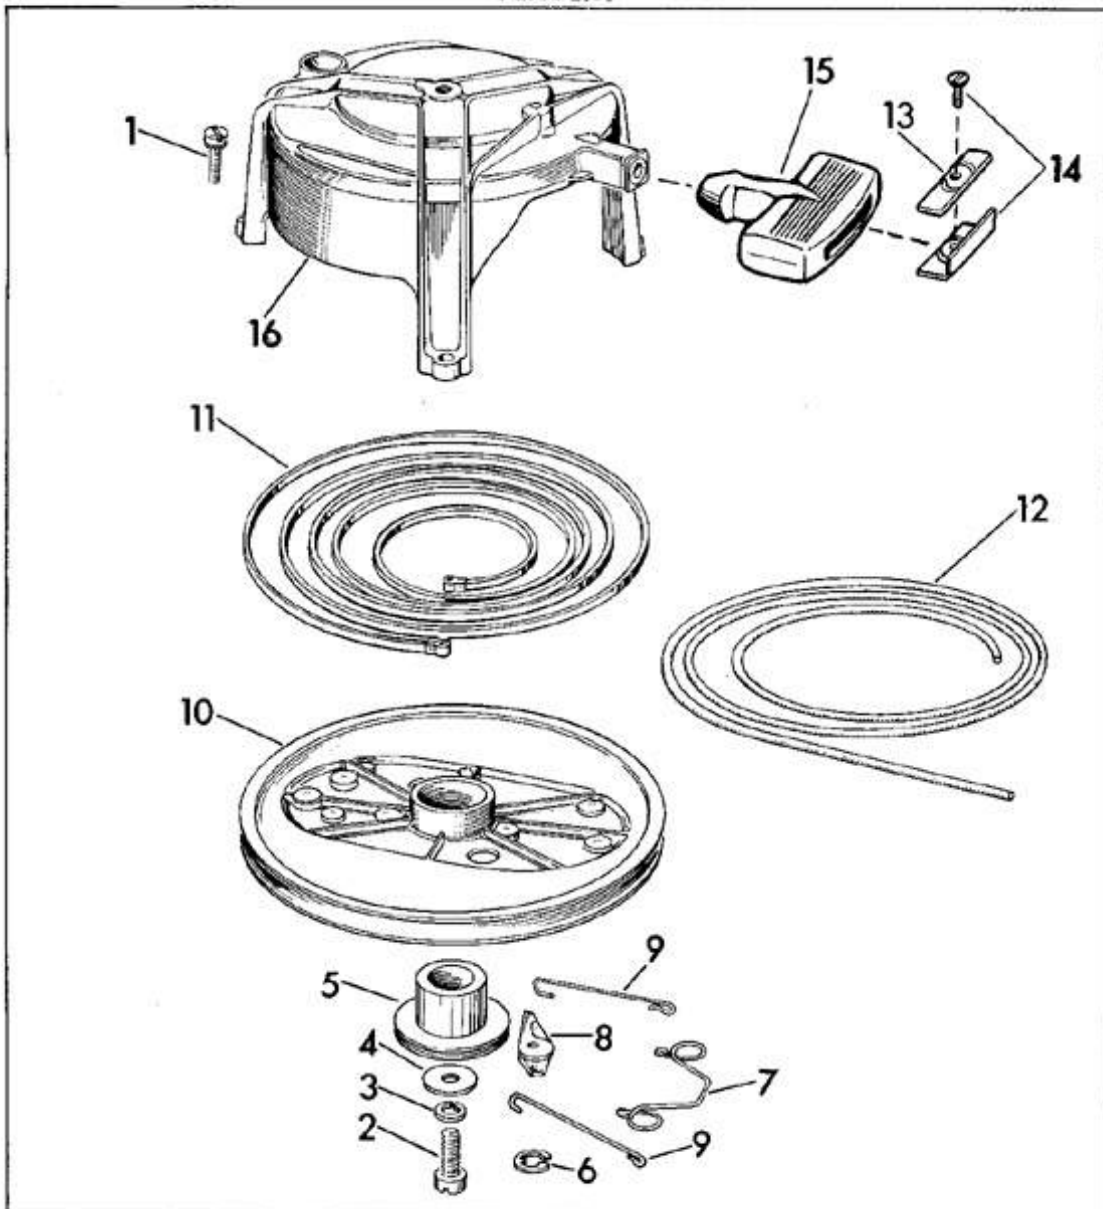

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	303288	Screw - Starter Hsg. to Cyl. & Manifold . Starter Assy. Complete	9	203713	Link - Friction Spring to Pawl . . .
2	306361	Screw - Spindle to Housing	10	376670	Starter Pulley and Pin Assembly
3	306339	Lockwasher	11	41-197	Spring - Starter
4	202356	Washer - Starter Spindle	12	203820	Rope - Starter
5	203699	Spindle - Starter	13	551205	Clamp - Starter Rope
6	203470	Retaining Ring - Starter Pawl	14	591214	Clamp and Screw - Rope
7	203697	Friction Spring	15	551226	Handle Starter
8	203698	Pawl - Starter	16	277555	Starter Housing and Guide Pin Assembly

MAGNETO Parts List

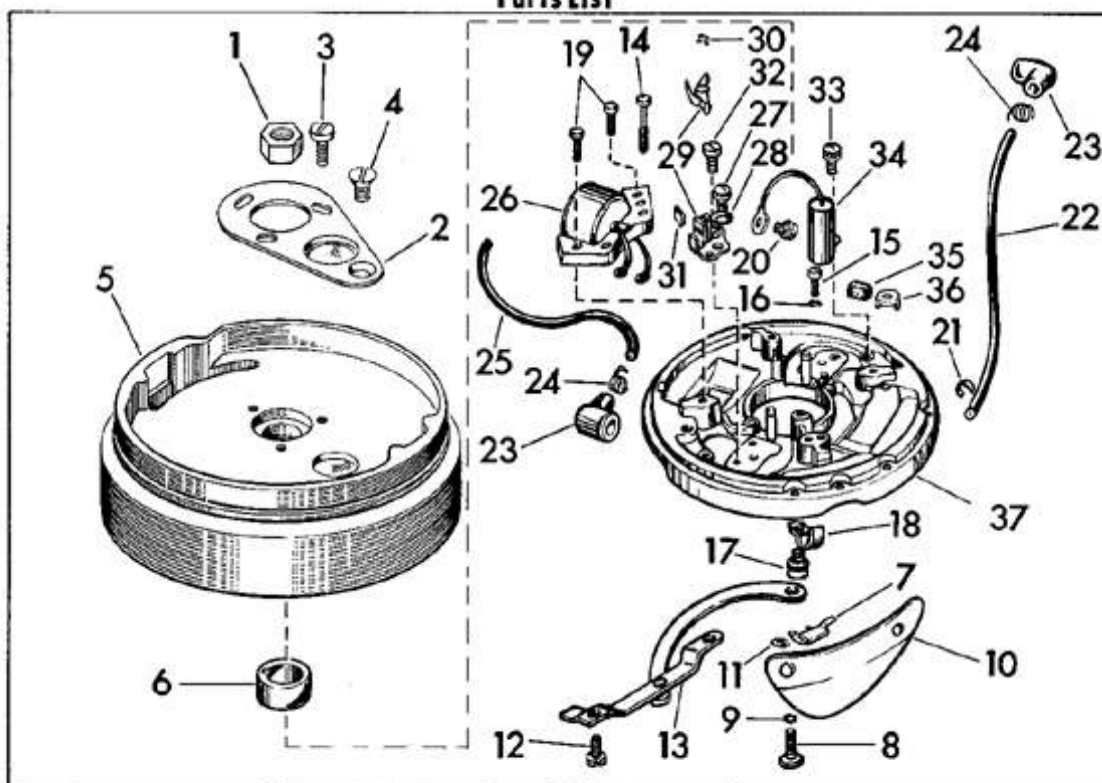


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	301988	Nut Flywheel	19	510195	Screw - Lamination Mounting
	580217	Flywheel & Cover Assy.	20	510194	Screw - Breaker Terminal
2	510292	Cover	21	120783	Marker - Upper Lead
3	203751	Screw - Cover to Flywheel	22	580178	High Tension Lead Assy., Upper
4	510293	Screw - Insp. Hole Cover to Flywheel	23	510232	Cover - Rubber, Spark Plug
5	580204	Flywheel	24	510231	Terminal - Spring Lead
6	510168	Cam - Magneto	25	580179	High Tension Lead Assy., Lower (Also Incl. Items 23 & 24)
7	305988	Clip - Spring Arm, Plate Link	26	590118	Coil and Lamination Assembly
8	302750	Screw - Throttle Cam to Plate	27	510278	Screw - Breaker Mtg.
9	306546	Washer - Lock	28	510208	Washer - Bow
10	552642	Cam - Throttle	29	580148	Breaker Assembly
11	306547	Spacer - Throttle Cam	30	71-1052	Clip - Spring
12	510193	Screw - Linkage Assy. to Armature Plate	31	510204	Clip - Breaker Spring
13	376064	Throttle Control Plate and Link Assembly.	32	510185	Screw - Eccentric
	580206	Armature Plate Assy.	33	510193	Screw - Condenser Mounting
14	510191	Screw - Armature Plate Mounting	34	510173	Condenser
15	510192	Screw - Armature Plate Mounting	35	510189	Wick - Oil
16	306311	Washer - Lock	36	510188	Clip - Oiler
17	510193	Screw - High Tension Lead Clamp Mtg.	37	580168	Armature Plate and Post Assembly
18	510388	Clamp - High Tension Lead			

CARBURETOR MANIFOLD

5D15


Parts List

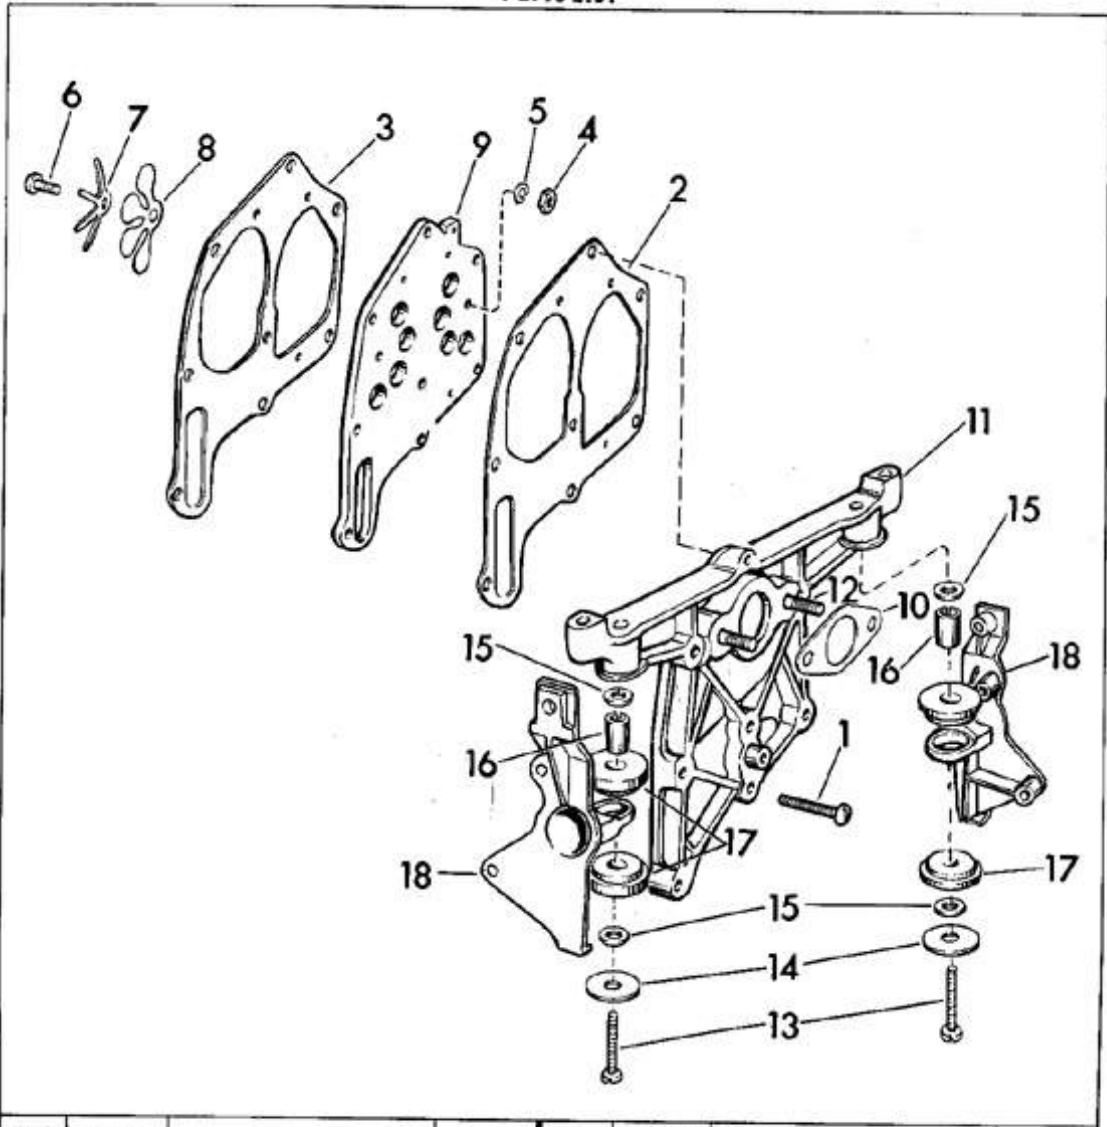

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	133451	Screw - Manifold to Crankcase	11	592282	Intake Manifold and Stud Assembly
2	552622	Gasket - Manifold to Leaf Plate	12	85-101	. Stud - Carb. to Manifold
3	552623	Gasket - Leaf Plate to Crankcase	13	306468	Screw - Shroud Mounting Bracket
4	306556	Nut - Leaf to Leaf Plate Screw	14	302407	Washer - Shroud Mounting, Large
5	306546	Washer - Lock, Leaf to Leaf Plate Screw	15	306482	Washer - Shroud Mounting, Small
6	301858	Screw - Leaf Attaching	16	302406	Spacer - Shroud Mounting
7	552608	Stop - Leaf	17	302405	Grommet - Shroud Mounting
8	552614	Leaf	18	553591	Bracket - Shroud Mounting, Front
9	552609	Plate - Leaf			
10	303437	Gasket - Carburetor to Manifold			

CARBURETOR

Parts List

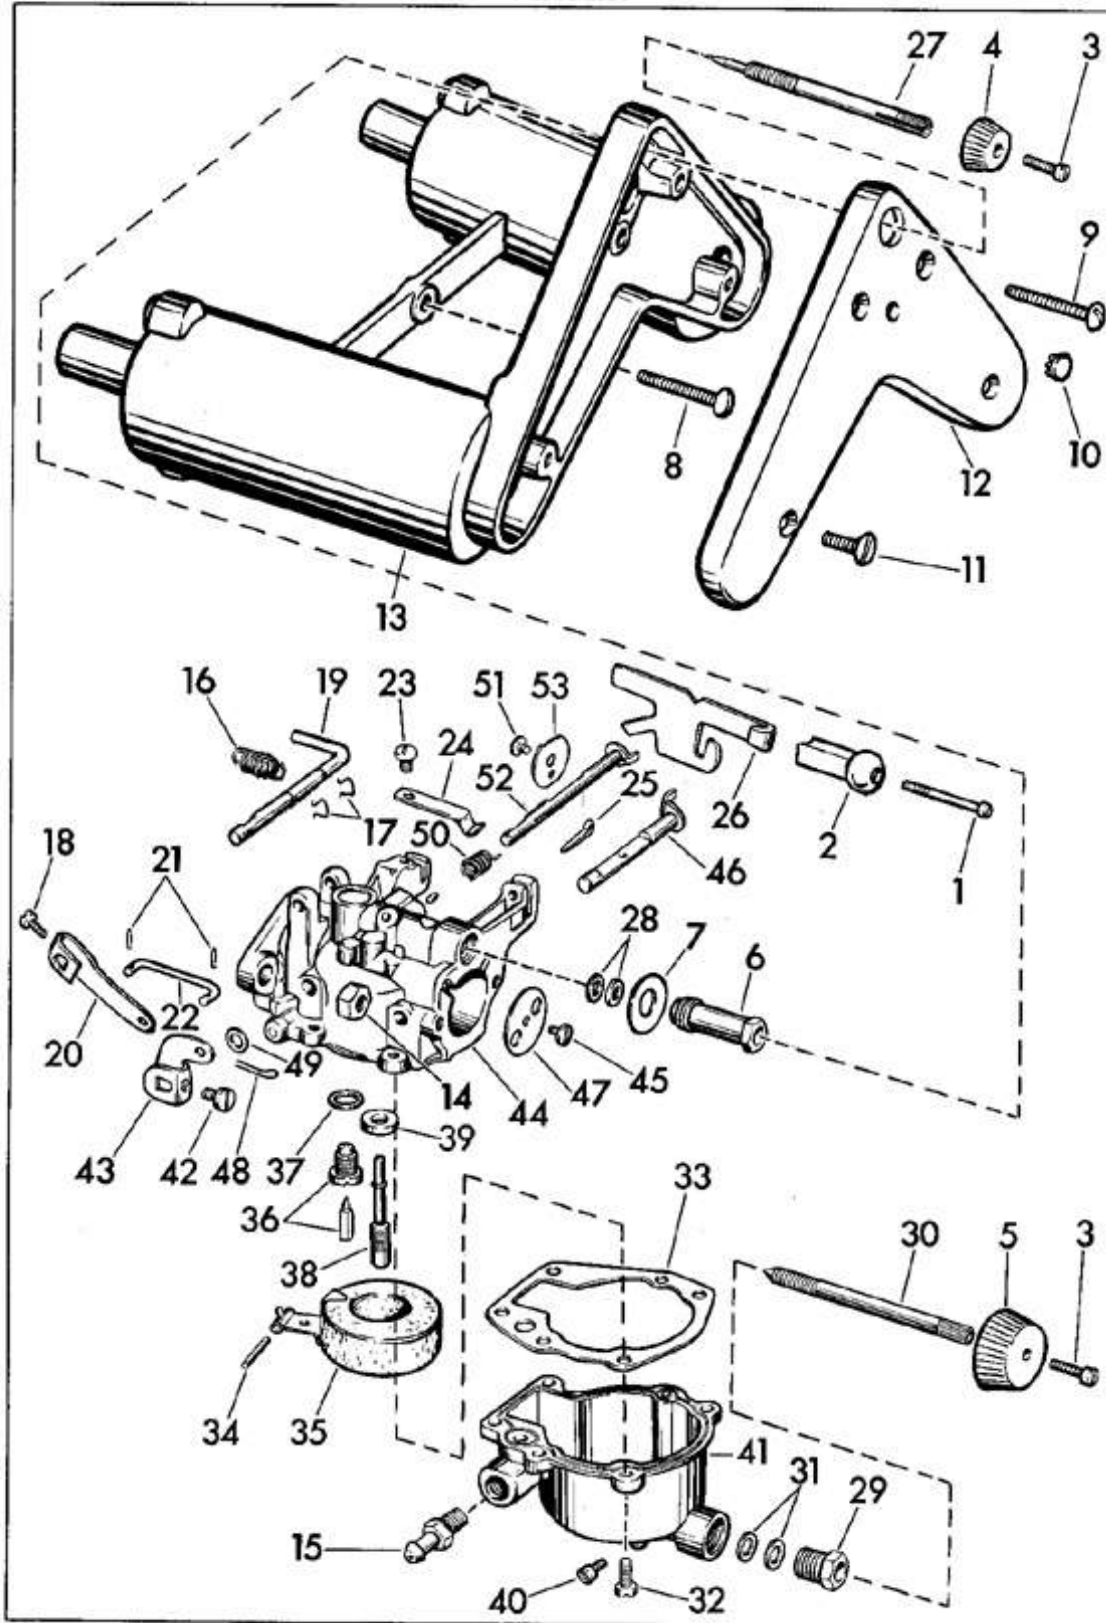


CARBURETOR Parts List

5D15

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	552529	Screw - Choke Knob .	28	43-123	Packing - Slow
2	552528	Knob - Choke Control			Speed
3	551517	Screw - Carburetor	29	300179	Nut - High Speed
		Control Knob			Needle Valve. . . .
4	591279	Slow Speed Control	30	303476	Needle Valve - High
		Knob and Stop Pin			Speed
		Assembly	31	43-123	Packing - High Speed
5	591482	High Speed Control			Valve
		Knob and Stop Pin	32	71-1589	Screw - Float
		Assembly			Chamber to Carb.
6	303479	Nut - Slow Speed			Body
		Needle Valve	33	302994	Gasket - Float
7	203355	Washer - Carb. Slow			Chamber to Carb.
		Speed Valve Nut . . .			Body
8	304890	Screw - Silencer to	34	300096	Hinge Pin - Float
		Manifold			Arm
9	200931	Screw - Silencer to	35	375919	Float & Float Arm
		Carburetor			Assembly
10	203652	Plug - Button, Air	36	375985	Float Valve & Seat
		Silencer			Assembly
11	302124	Screw - Cover Plate	37	301996	Washer - Float
		to Silencer Body . .			Valve Seat
12	552615	Plate - Air Silencer	38	303447	Nozzle - High Speed
		Cover	39	302984	Gasket - Float
13	591569	Loading Tube & Air			Chamber to Carb.
		Silencer Body Assy.			Body Boss
14	19-136	Nut - Carburetor to	40	303041	Screw - Float
		Manifold			Chamber Drain . .
	592290	Carburetor Assy.	41	552606	Float Chamber . .
		Complete	42	304572	Screw - Throttle &
15	303172	Nipple - Gas Line			Cam Follower Lever
16	203166	Spring - Cam	43	376725	Lever & Screw Assy.
		Follower			- Cam Follower to
17	71-1052	Clip - Cam,			Throttle Shaft (Incl.
		Follower			#42
18	304572	Screw - Cam	44	376531	Carburetor Body -
		Follower			Plug & Throttle
19	552605	Follower - Throttle			Valve Assy.
		Cam	45	303760	Screw - Choke
20	376726	Lever & Screw Assy.			Valve
		- Cam Follower	46	375921	Choke Shaft &
		(Incl. #18)			Lever Assy. . . .
21	41-110	Pin - Cam Follower	47	303709	Choke Valve
		Link	48	303049	Cotter Pin -
22	203164	Link - Lever to			Throttle Shaft . .
		Follower	49	303048	Washer - Throttle
23	302430	Screw - Spring to			Shaft
		Carburetor Body.	50	302996	Spring - Throttle
24	302977	Spring - Choke			Shaft
		Control Rod	51	303760	Screw - Throttle
25	21-163	Cotter Pin - Choke			Valve
		Control Rod	52	375922	Throttle Shaft &
26	302997	Rod - Choke Control			Lever Assy. . . .
27	303448	Needle Valve -	53	304326	Throttle
		Slow Speed			Valve

POWER HEAD


Parts List

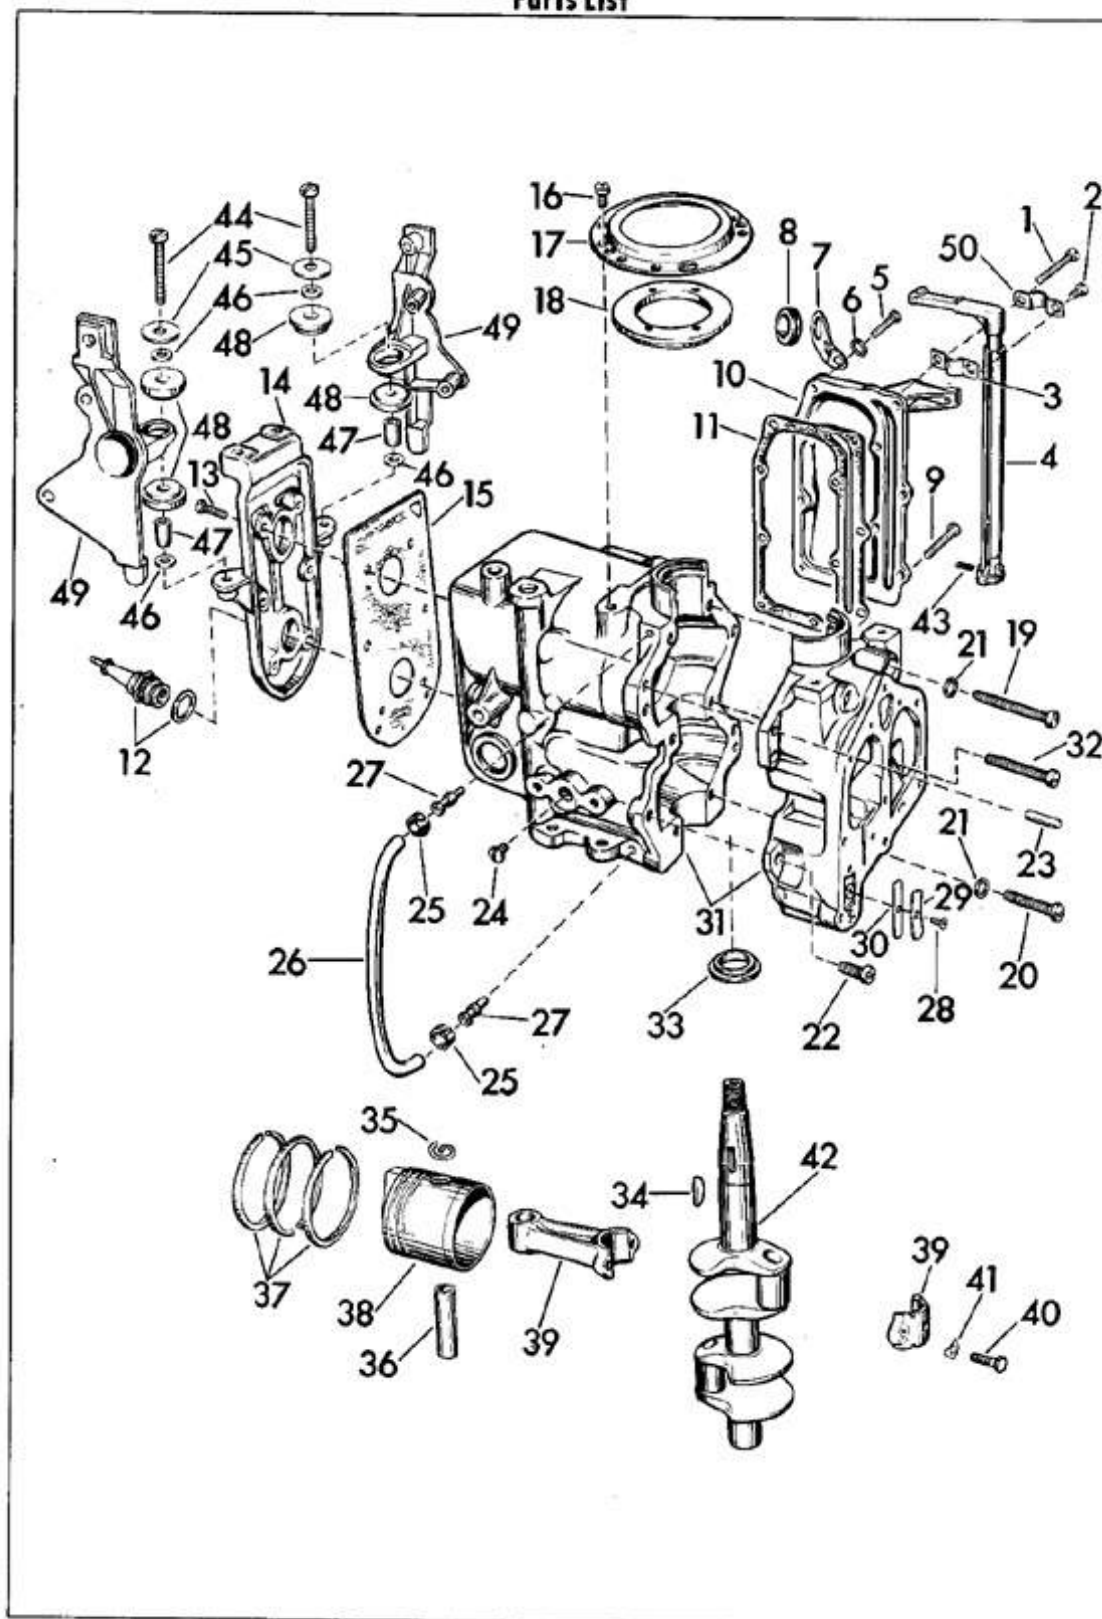

POWER HEAD Parts List

5D15


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	132123	Screw - Brg. Clamp and Exh. Cover . .	24	303125	Screw - Fuel Pump Outlet Plug
2	308479	Screw - Brg. Clamp	25	303473	Clamp - Oil Return Hose
3	303109	Clamp - Bearing . .	26	552613	Hose - Oil Return . . .
4	552611	Lever - Armature Plate Control . . .	27	303423	Nipple - Oil Hose to Cylinder
5	132346	Screw - Anchor and Exh. Cover to Cyl.	28	306402	Screw - Leaf Valve to Crankcase
6	300154	Washer - Anchor and Exh. Cover Screw .	29	203248	Plate - Leaf Valve . .
7	300455	Anchor - Ignition Leads	30	203235	Valve - Leaf, Crankcase Drain
8	300454	Grommet - Ignition Leads	31	592292	Cyl. and Crankcase Assy. Incl. #20, 21, 22, 23, 24, and 33) .
9	306431	Screw - Exh. Cover to Cylinder	32	306440	Screw - Cylinder to Crankcase, Center
10	303407	Cover - Exhaust . .	33	303649	Slinger - Oil
11	303439	Gasket - Exhaust Cover	34	120395	Key - Crankshaft . . .
12	200322	Spark Plug (Champion J6J). . .	35	120110	Ring - Lock, Piston Pin
12	376290	Spark Plug (Auto-Lite A3X)	36	303333	Pin - Wrist
12	377245	Spark Plug AC M44C	37	41-333	Ring - Piston
13	306431	Screw - Cover to Cylinder	38	376067	Piston and Dowel Pin Assembly
14	553198	Cover - Cylinder . .	39	591919	Connection Rod and Lockplate Assembly .
15	552625	Gasket - Cylinder Cover	40	41-44	Screw - Connecting Rod
16	304442	Screw - Support Plate	41	41-17	Lockplate - Connecting Rod
17	591857	Support and Stop Assy. - Armature Plate	42	552607	Crankshaft
18	303277	Ring - Armature Plate Retaining	43	303236	Spring - Control Lever to Gear
19	302431	Screw - Cylinder to Crankcase, Upper .	44	306468	Screw - Shroud Mounting Bracket . .
20	306468	Screw - Cylinder to Crankcase, Lower	45	302407	Washer - Shroud Mounting, Large . . .
21	300399	Washer - Cylinder to Crankcase Screw . .	46	306482	Washer - Shroud Mounting, Small . . .
22	306483	Screw - Cylinder to Crankcase	47	302406	Spacer - Shroud Mtg. .
23	300402	Pin - Taper, Cylinder to Crankcase . . .	48	302405	Grommet - Shroud Mounting
			49	553199	Bracket - Shroud Mounting, Rear . . .
			50	305609	Clamp

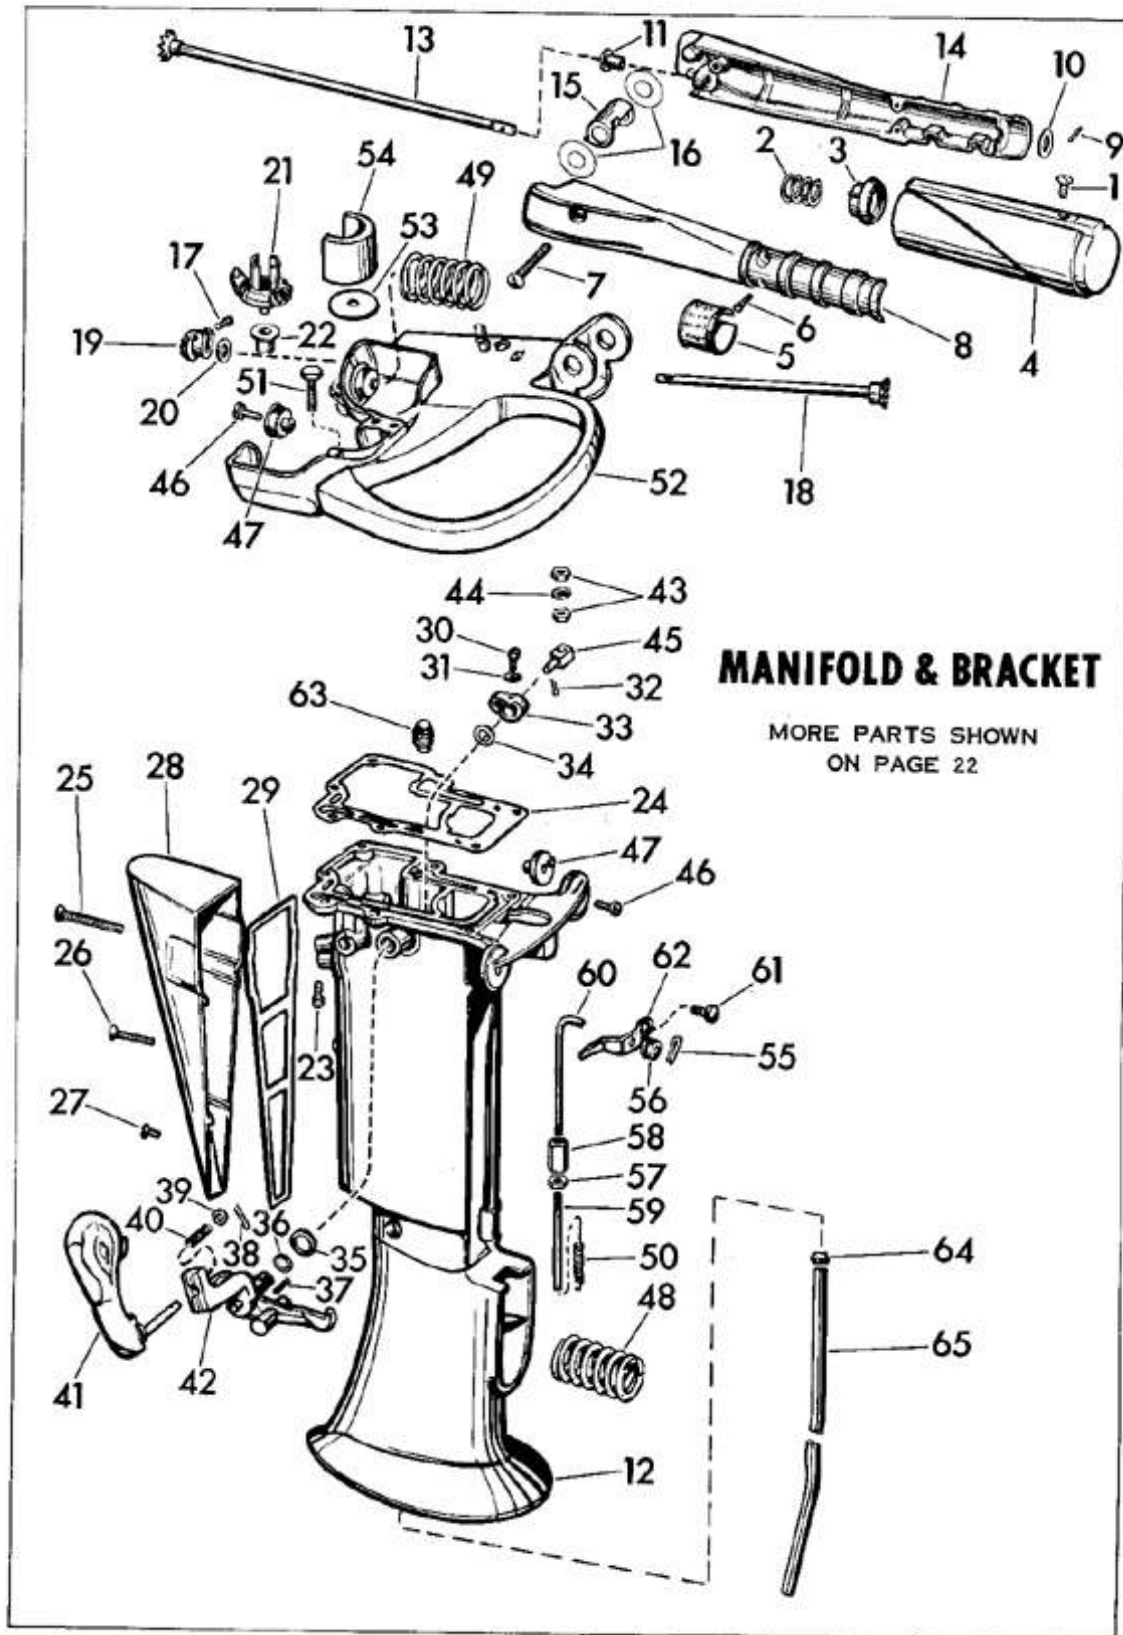

MANIFOLD & BRACKET Parts List

5D15

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	302710	Screw - Steering Handle Grip	31	303715	Washer - Shift Lever to Shaft
2	301656	Spring - Grip to Friction Block . . .	32	306376	Pin - Cotter, Shift Rod
3	303282	Block - Grip Friction	33	376922	Lever - Shaft to Shift Rod
4	552209	Grip - Steering Handle	34	303775	Washer - Shift Lever & Shaft Assy., Inner . .
5	203260	Plate - Throttle Control	35	303864	Washer - Shift Lever and Shaft
6	133452	Screw - Steering Handle Halves	36	303191	"O" Ring - Shift Lever
7	303078	Screw - Steering Handle Halves	37	303236	Spring - Washer
8	303093	Handle - Steering Inner Half	38	552497	Pin - Straight, Shift Handle
9	300346	Pin - Groove, Gear and Shaft Assy. . . .	39	552783	Washer - Shift Handle Pivot Pin
10	303252	Washer - Steering Handle to Spring . .	40	552498	Spring - Shift Handle . .
11	305100	Bushing - Steering Handle	41	277626	Shift Handle and Pin Assembly
12	376079	Driveshaft Casing, Exh. Tube & Core Plug Assembly . . .	42	591583	Shift Shaft and Arm Assembly
13	376691	Throttle Control Gear and Shaft Assembly, Long . .	43	306556	Nut - Shift Rod to Connector
14	303094	Handle - Steering, Outer Half	44	303701	Washer - Lock, Shift Rod Nut
15	303096	Cover - Steering Handle Gears	45	303702	Connector - Shift Rod to Lever
16	303079	Washer - Steering Bracket to Handle . .	46	303394	Screw - Spring Ret. . .
17	306543	Screw - Pinion	47	303369	Retainer - Upper Mount Spring
18	376689	Gear and Shaft Assembly, Short	48	303461	Spring - Lower Mount . .
19	303142	Pinion - Throttle Control	49	303458	Spring - Upper Mount . .
20	303107	Washer - Pinion Gear	50	303465	Spring - Reverse Lock Rod to Reverse Rod . .
21	303800	Gear - Throttle Control	51	303398	Screw - Steering Brkt. to Pilot Shaft
22	303140	Bushing - Throttle Control	52	376269	Steering Bracket and Bushing Assembly . .
23	306483	Screw - Exh. Tube to Cylinder	53	303353	Plate - Steering Brkt. . .
24	303467	Gasket - Exh. Tube to Cylinder	54	303350	Support - Driveshaft Casing to Strg. Brkt. . .
25	303589	Screw - Exh. Tube Cover, Upper	55	550565	Pin - Cotter, Reverse Lock Link to Lever . .
26	303588	Screw - Exh. Tube Cover, Center	56	303364	Grommet - Reverse Lock Arm to Reverse Lock Link
27	304022	Screw - Exh. Tube Cover, Lower	57	306556	Nut - Lock, Reverse Lock Pin Coupling . .
28	303585	Cover - Exh. Tube	58	303706	Coupling - Reverse Lock Link
29	303586	Gasket - Exh. Tube Cover	59	303705	Link - Reverse Lock, Lower
30	303714	Screw - Shift Lever Shaft Assembly . . .	60	303408	Link - Reverse Lock, Upper
			61	303368	Screw - Shoulder, Reverse Lock Arm . .
			62	303409	Arm - Reverse Lock
			63	303348	Nut - Water Tube
			64	306327	Gland - Water Tube
			65	376459	Water Tube Assembly

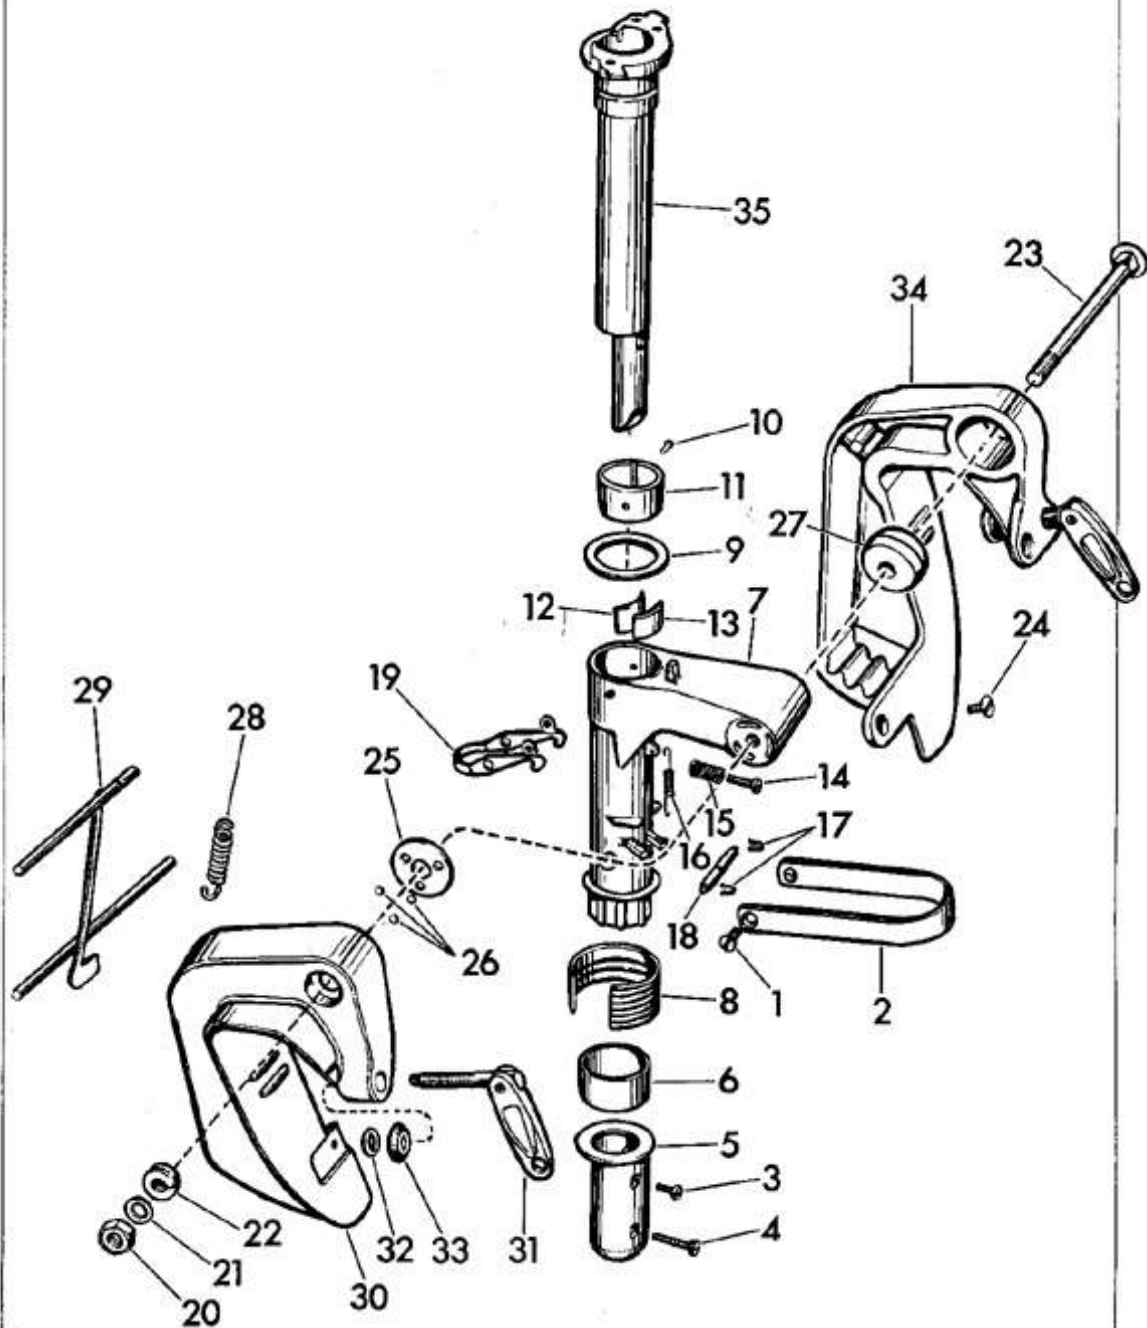MANIFOLD & BRACKETMORE PARTS SHOWN
ON PAGE 20


MANIFOLD & BRACKET Parts List

5D15

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	303397	Screw - Friction Band	19	304129	Lever - Reverse
2	303392	Band - Friction			Locking
3	303393	Screw - Steering Brkt. to Retainer, Upper. .	20	306386	Nut - Tilting Bolt . . .
4	302677	Screw - Steering Brkt. to Retainer, Lower .	21	25-196	Washer - Tilting Bolt .
5	303372	Retainer - Strg. Brkt.	22	302051	Spring - Tilting Bolt .
6	303362	Sleeve - Friction Band	23	303349	Bolt - Tilting
7	304131	Bracket - Swivel . . .	24	303396	Screw - Stern Brkt., Port to Starboard . .
8	303371	Absorber - Shock, Lower Swivel Brkt. .	25	202617	Shim - Stern Brkt. to Swivel Bracket . . .
9	303359	Washer - Thrust, Strg. Bracket to Swivel Bracket . . .	26	160084	Ball - Stern Bracket to Swivel Bracket . .
10	303696	Pin - Swivel Bracket to Upper Liner . . .	27	301983	Washer - Conical . . .
11	303370	Liner - Upper	28	202021	Spring - Tilting Lever
12	303697	Spacer - Co-pilot to Upper Liner	29	376395	Tilting Lever Assy. . .
13	303363	Plate - Co-pilot . . .	30	376082	Stern Bracket Assy., Starboard
14	132679	Screw - Co-pilot Plate	31	375744	. Clamp Screw, Plate and Retainer Assy.
15	551113	Spring - Co-pilot Plate Screw	32	302420	. . Retainer - Swivel Plate
16	303464	Spring - Reverse Lock Rod to Swivel Brkt. .	33	41-48	. . Plate - Clamp Screw Swivel . .
17	303049	Pin - Cotter, Reverse Lock Shaft	34	376081	Stern Bracket Assy., Port (Also Incl. Items 31, 32 & 33) . .
18	304130	Rod - Reverse Lock .	35	303500	Shaft - Steering Brkt. Pilot

GEAR CASE

Parts List

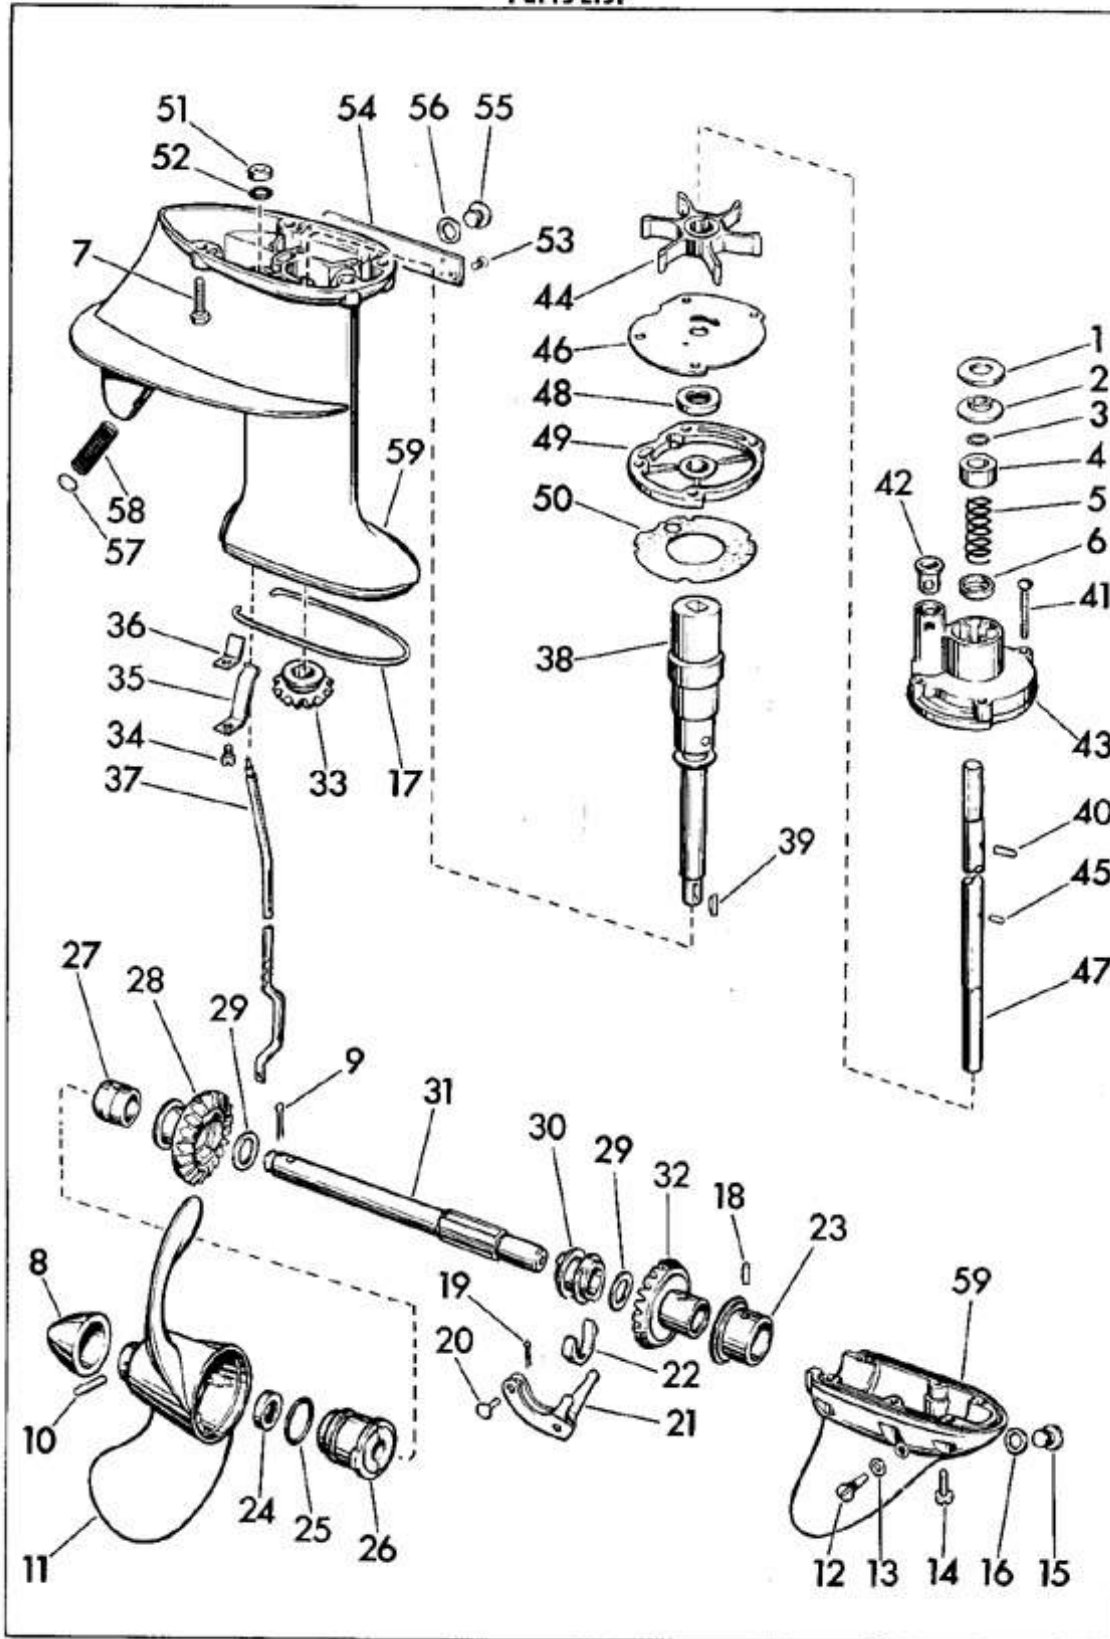


GEAR CASE Parts List

5D15

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	303355	Gasket - Driveshaft to Crankcase . . .	30	305214	Clutch Dog Shifter Assembly
2	303356	Plate - Driveshaft to Crankcase	31	305215	Shaft - Propeller . . .
3	303347	"O" Ring - Seal, Driveshaft	32	377152	Gear & Bushing Assy., Front
4	303391	Seal - Lower Brg. to Driveshaft . . .	33	304009	Pinion - Drive Shaft . . .
5	303357	Spring - Lower Bearing Seal	34	306478	Screw - Detent Spring . . .
6	303327	Washer - Spring Retaining	35	303466	Spring - Detent
7	302325	Screw - Exh. Tube to Gearcase	36	303700	Spring - Backup, Detent Spring
8	303365	Cap - Propeller . . .	37	303401	Rod - Shift
9	306349	Pin - Cotter, Propeller Shaft . . .	38	376073	Pinion Shaft & Shock Absorber Pilot Assy.
10	302333	Pin - Drive	39	1-135	Key - Pinion to Pinion Shaft
11	592063	Propeller & Bushing Assembly	40	303261	Pin - Drive Shaft
12	303358	Pin - Shifting Lever Pivot	41	303395	Screw - Impeller Housing
13	304083	Washer - Pivot Pin . . .	42	302497	Grommet - Water Tube, Lower
14	304071	Screw - Lower to Upper Gearcase . . .	43	303442	Housing - Impeller . . .
15	27-283	Screw - Grease Plug (Drain)	44	277181	Impeller & Insert Assembly
16	27-284	Washer - Grease Plug (Drain)	45	300771	Pin - Impeller to Driveshaft
17	303328	Seal - Upper to Lower Gearcase . . .	46	303376	Plate - Impeller Hsg. . .
18	300611	Pin - Dowel	47	376093	Driveshaft & Pin Assy. (Incl. #40)
19	306376	Pin - Cotter, Pivot Pin	48	300599	Seal - Bearing Housing . . .
20	302504	Pin - Shift Rod	49	376074	Bearing Housing & Bearing Assembly . . .
21	303340	Lever - Shifter	50	303339	Gasket - Bearing Housing to Gearcase . . .
22	303381	Cradle - Shifter	51	303332	Bushing - Shift Rod, Lower
23	303380	Bearing - Front, Gearcase	52	301877	"O" Ring - Shift Rod . . .
24	303345	Seal - Gearcase Head	53	302681	Screw - Bypass Cover . . .
25	303360	"O" Ring - Gearcase Head	54	304579	Cover - Water Bypass . . .
26	376776	Gearcase Head & Bearing Assy.	55	27-283	Screw - Grease Plug, Fill
27	303998	Bushing - Rear Reversing Gear . . .	56	27-284	Washer - Grease Plug, Fill
28	305216	Gear - Rear Reversing	57	300314	Plug - Water Intake Screen
29	303361	Washer - Thrust	58	303331	Screen - Water Intake
			59	376775	Gearcase Assy. (Incl. #14, 15, 16, 17, 18, 51, 52, 55, 56, 57, and 58)

FUEL TANK AND PUMP

Parts List

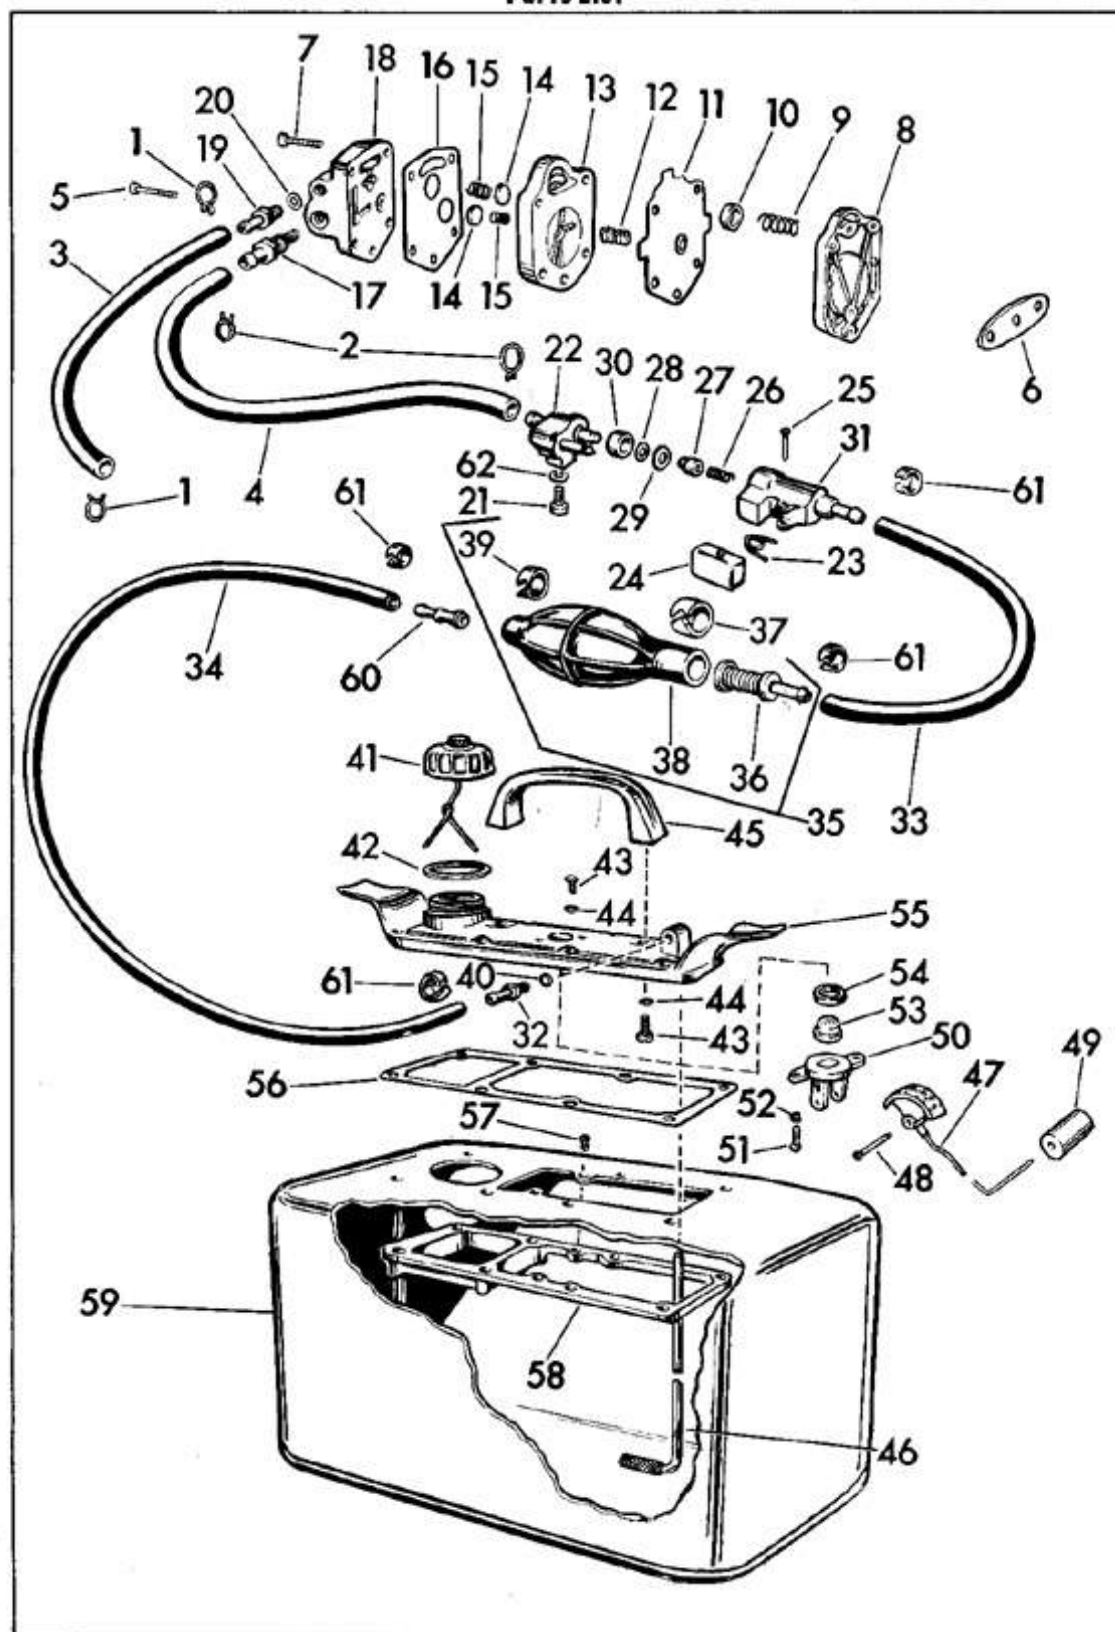

FUEL TANK AND PUMP Parts List

5D15

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	552199	Clamp - Hose	31	377426	. . Housing and Nipple Assembly . . .
2	552199	Clamp - Hose	32	552237	. Nipple - Housing to Hose
3	203286	Hose - Fuel Pump to Carburetor	33	303601	. Hose - Fuel Primer to Fuel Connector . .
4	303601	Hose - Fuel Pump to Connector	34	553195	. Hose - Tank to Primer Bulb
5	303616	Screw - Fuel Pump to Bypass Cover	35	592131	. Primer Bulb, Nipple and Clamp Assy. . . .
6	303615	Gasket - Fuel Pump to Bypass Cover	36	592242	. . Nipple and Valve Assembly.
7	133451	Fuel Pump Assembly	37	553166	. . Clamp - Bulb and Nipple
8	304089	. Screw - Fuel Pump Assembly	38	553164	. . Primer - Bulb
9	304486	. Housing - Outer	39	303596	. . Clamp - Hose
10	304094	. Spring - Diaphragm Support	40	303630	. Washer - Outlet Nipple
11	376619	. Support - Diaphragm Diaphragm Assembly	41	591312	. Filler Cap Assembly
12	303662	. Spring - Diaphragm	42	552328	. . Gasket - Filler Cap
13	304090	. Housing - Inner	43	304137	. Screw - Housing to Support Plate and Handle
14	303643	. Valve - Disc	44	301814	. Gasket - Screw to Handle and Housing
15	303642	. Spring - Inlet and Outlet	45	101485	. Handle - Tank
16	304092	. Gasket - Inner Housing to Valve Housing	46	592288	. Fuel Line and Screen Assembly
17	376161	. Nipple and Screen Assy.	47	592286	. Indicator Assembly
18	304091	. Housing - Valve	48	305821	. Pin - Indicator Assembly to Fuel Gage Housing
19	303638	Nipple - Fuel Pump Outlet	49	302559	. Float - Gas Tank
20	303630	Washer - Outlet Nipple	50	552763	. Housing - Fuel Gage
21	306419	Screw - Fuel Connector to Steering Bracket	51	306431	. Screw - Fuel Gage Housing to Upper Housing
22	376154	Fuel Connector Body Assembly	52	120052	. Lockwasher - Fuel Gage Screw
	592291	Gas Tank Assembly	53	302568	. Glass - Gas Tank
	376156	. Fuel Connector Housing Assembly	54	302571	. Seal - Gas Tank
23	301829	. Spring - Fuel Connector Lock	55	552762	. Housing - Upper Gas Tank
24	301830	. Lock - Fuel Connector	56	302557	. Gasket - Tank
25	301832	. Rivet - Fuel Connector Lock	57	306492	. Screw - Support Plate to Tank
26	303594	. Spring - Fuel Connector Valve	58	305356	. Plate - Support Tank
27	303595	. Valve - Fuel Connector	59	592287	. Fuel Tank Assembly
28	303598	. "O" Ring - Fuel Connector Seal	60	591841	. Nipple and Valve Assembly
29	303599	. Washer - Fuel Connector	61	303596	. Clamp - Hose
30	303602	. Retainer - Fuel Connector Seal	62	306488	Lockwasher - Fuel Connector Screw