


1955

PARTS CATALOG

FOR


Models RDE-17 and RDEL-17

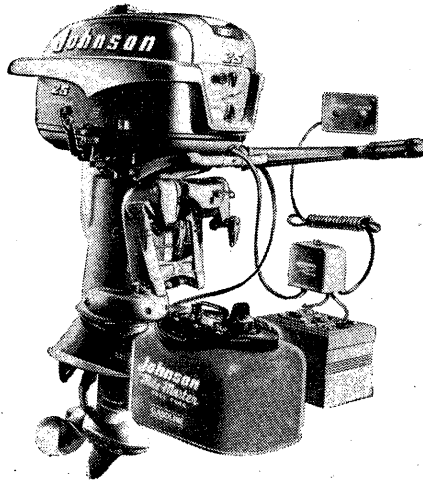

**ELECTRIC STARTING
SEA HORSE 25**

JOHNSON MOTORS

Waukegan, Illinois, U. S. A.

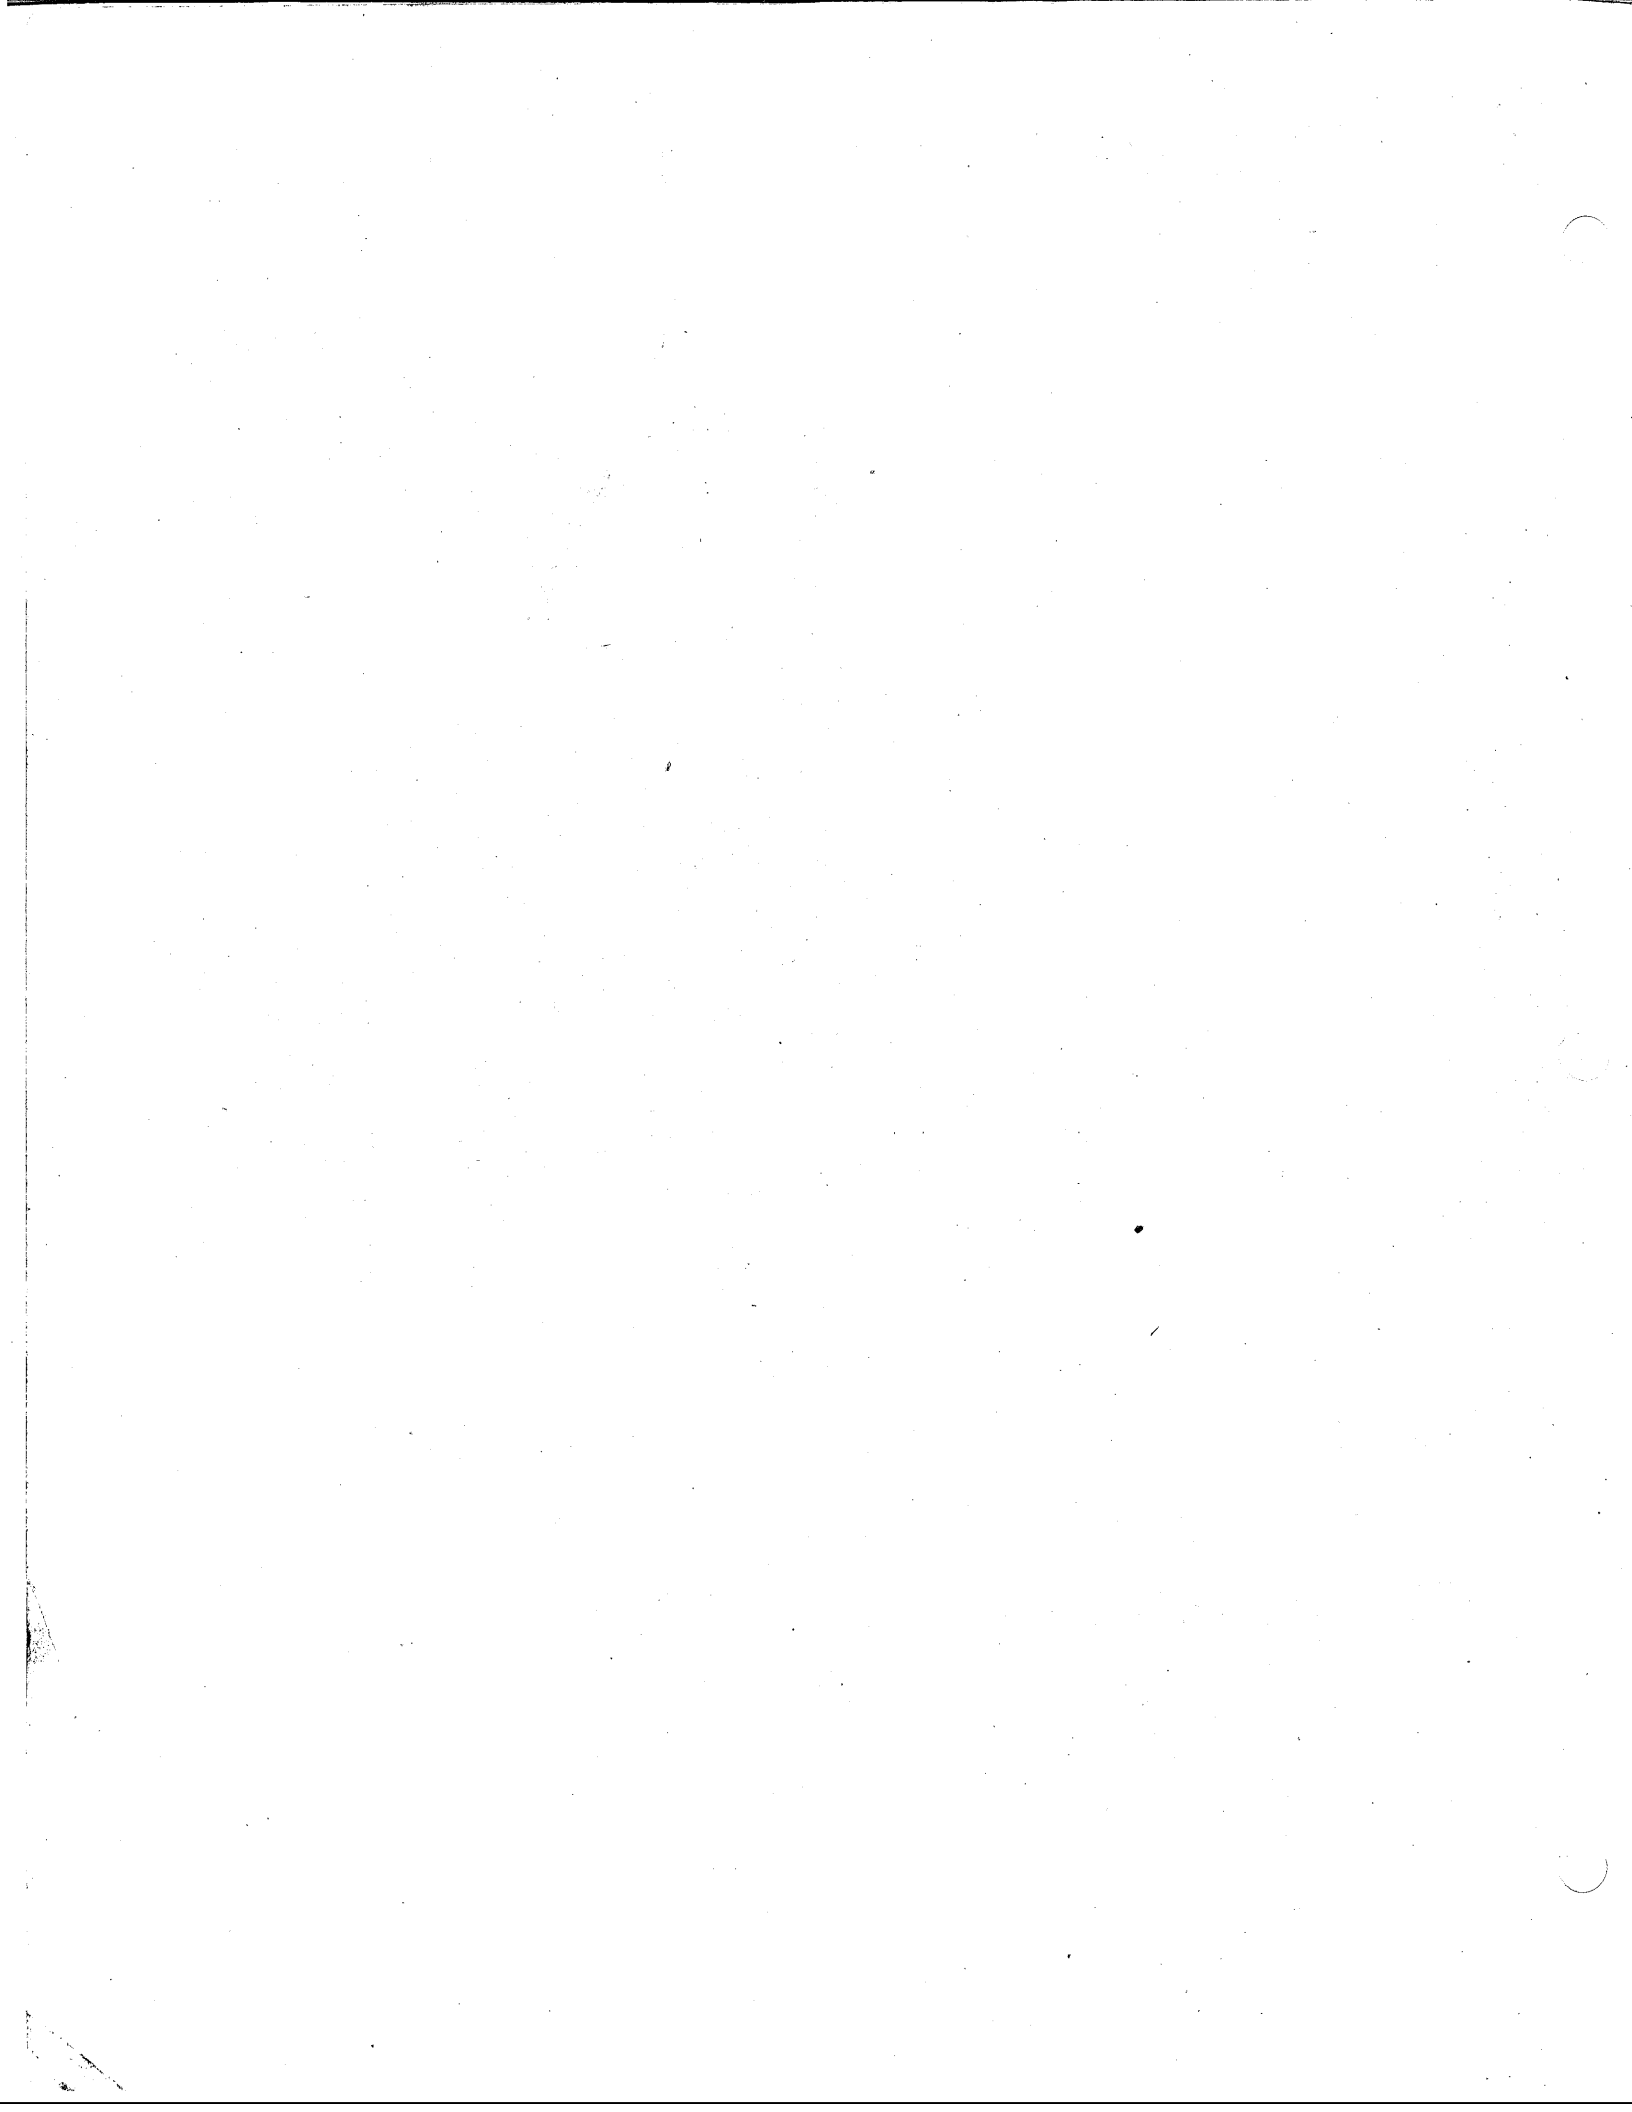

Warranty

We warrant each new outboard motor of our manufacturers to be free from defects in material and workmanship under normal use and service, our obligation under this warranty being limited to making good at the factory any part or parts thereof which shall, within three (3) months after delivery of such motor to original purchasers, be returned to us with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties and representations expressed or implied and of all other liabilities in connection with the sale or use of any motors.



This warranty shall not apply to any motor which shall have been repaired or altered outside the factory in any way so as to affect its stability, nor which has been subject to misuse, negligence or accident. Warranty is void if motor is used for racing purposes.

We make no warranty in respect to trade accessories not of our manufacture; inasmuch as they are usually warranted separately by their respective manufacturers.

Because of the usual strains and accidents to which such products may be subjected, we make no warranty of either material or workmanship in racing outboard motors or any of our products when used for racing.

Claims must be entered on motors or motors parts returned to the factory for inspection, repair or replacement. Request form No. SE-16 from local Johnson Dealer or Service Station. This form should be filled in, signed by the motor owner and dealer or service station representatives and mailed to the factory with returned material, **TRANSPORTATION CHARGES PREPAID.**

SHROUD GROUP

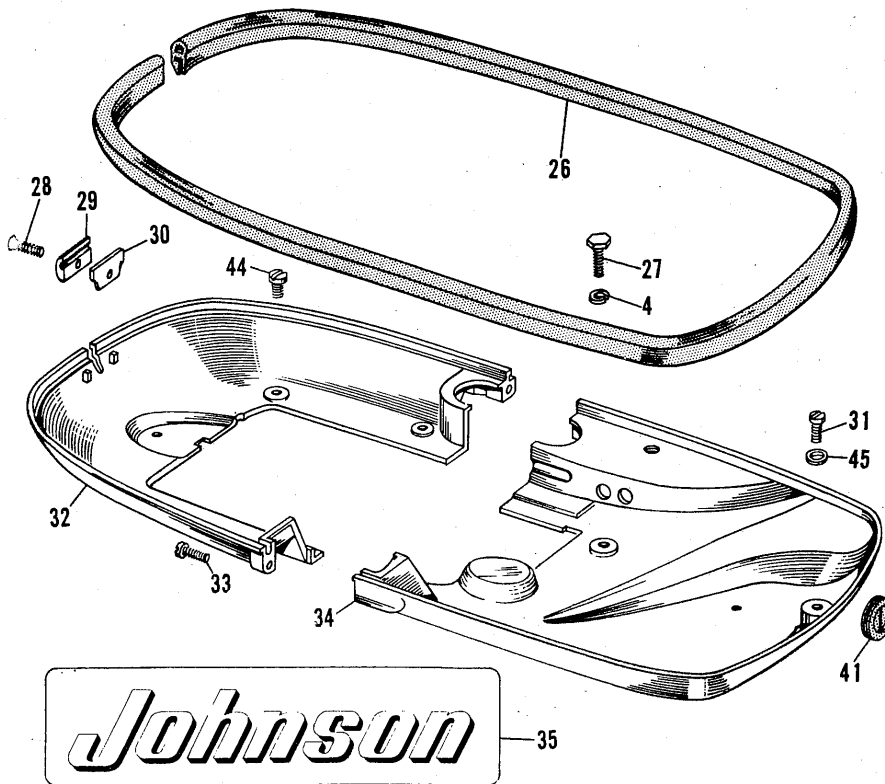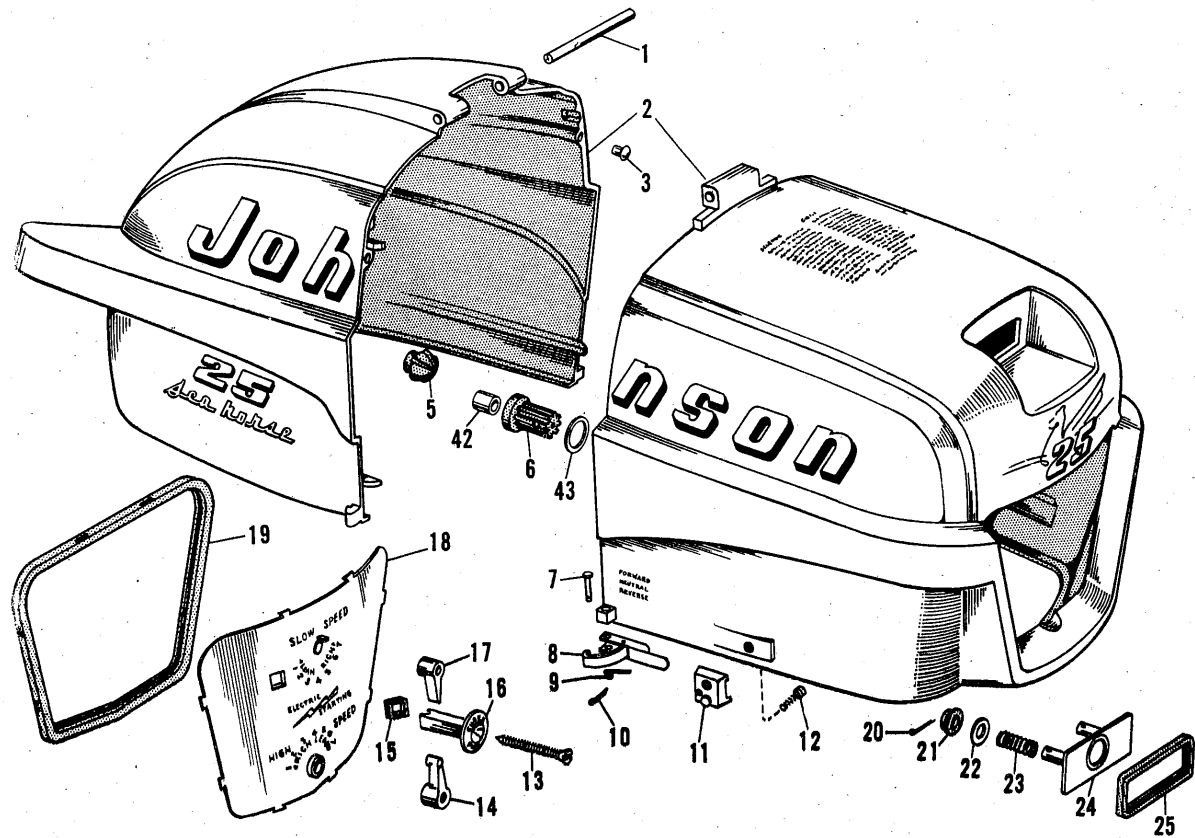


INSTRUCTIONS

STARTING

OILING

Always use the correct oil for your engine. The oil should be changed at the intervals specified in the manual. The oil should be changed before the engine is started. The oil should be changed before the engine is started. The oil should be changed before the engine is started.

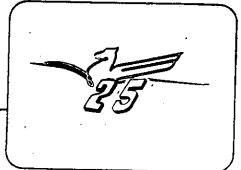

25
Sea Horse

ELECTRIC STARTING

FORWARD
NEUTRAL
REVERSE

PHOTO AND PART NUMBERS FOR SHROUD GROUP

Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	303984	Hinge Pin	24	303528	Cover
2	376420	Shroud and Transfer Assembly Complete	25	303529	Grommet
3	203290	Bumper	26	304018	Seal
4	303480	Lockwasher	27	304027	Screw
5	303564	Bumper	28	304022	Screw
6	303958	Bumper	29	304021	Clamp - Outer
7	303522	Pin	30	304020	Clamp - Inner
8	376129	Clamp and Lever Assembly	31	300258	Screw
9	303519	Spring	32	304016	Motor Cover - Lower Rear
10	303590	Cotter Pin	33	303714	Screw
11	303985	Boss	34	304028	Motor Cover - Lower Front
12	19-189	Screw	35	303820	Transfer - "Johnson"
13	302761	Screw	36	303821	Transfer - Start and Oil
14	303521	Adjusting Lever - High Speed	37	303822	Transfer - Sea-Horse 25 - Front
15	303796	Grommet	38	303823	Transfer - "25" Sea-Horse
16	303718	Choke Knob	39	304075	Transfer - Electric Starting
17	303847	Adjusting Lever - Slow Speed	40	303824	Transfer - Gearshift
18	376332	Control Panel and Transfer Assembly	41	304017	Grommet
19	303983	Grommet	42	303959	Sleeve
20	41-163	Cotter Pin	43	303960	Washer
21	303535	Grommet	44	39-176	Screw
22	202065	Washer	45	43-302	Washer
23	303518	Spring			

Order All Parts from Nearest Service Station or Dealer

ELECTRIC STARTER, JUNCTION BOX AND SWITCH PLATE GROUP

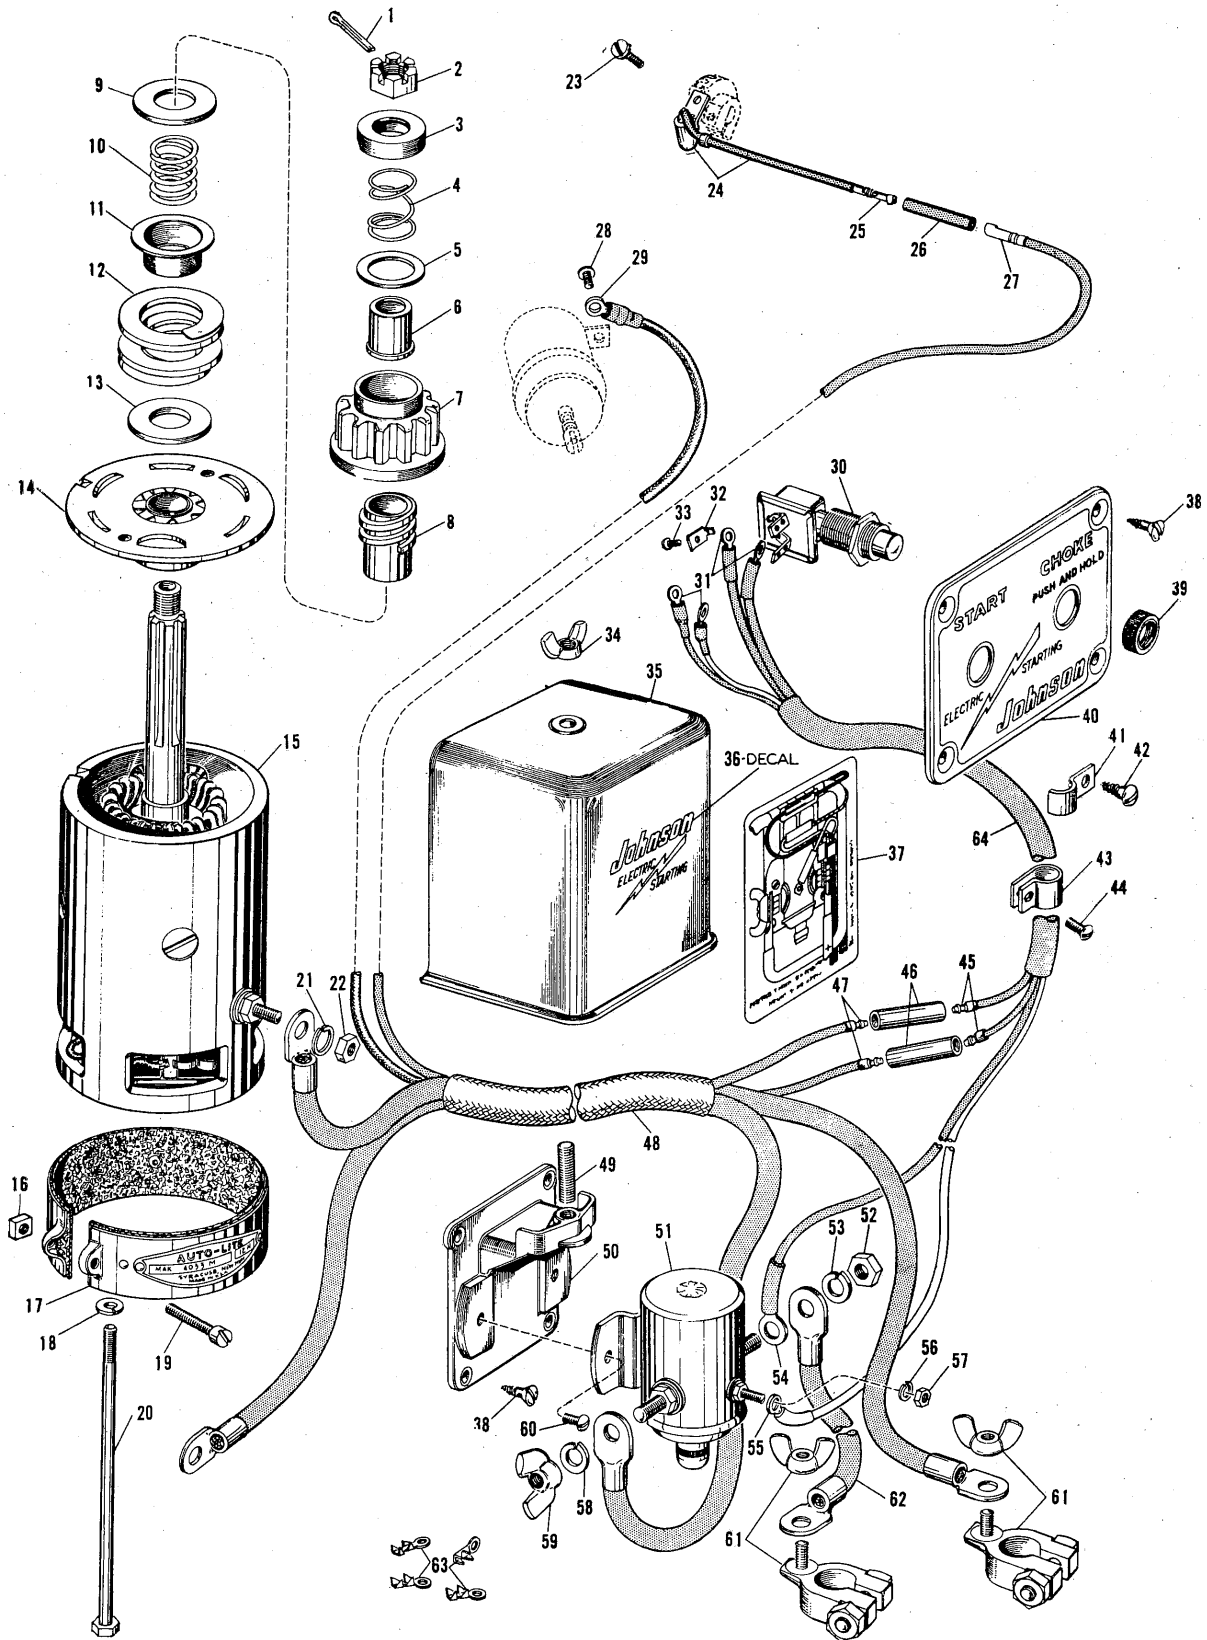


PHOTO AND PART NUMBERS FOR ELECTRIC STARTER,
JUNCTION BOX AND SWITCH PLATE GROUP

Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	120219	Cotter Pin	36	303778	Decal - Johnson
2	203569	Nut			Electric Starting
3	203557	Cup		(376265	Junction Box and
4	203562	Spring			Switch Plate Assembly)
5	203560	Washer	37	203507	Decal - Wiring
6	203558	Sleeve			Diagram
7	203556	Pinion	38	303776	Screw
8	203559	Screw Shaft	39	203500	Nut
9	203568	Thrust Washer	40	303779	Switch Plate
10	203561	Spring	41	203505	Clamp
11	203566	Support	42	303777	Screw
12	203567	Drive Spring	43	203501	Clamp
13	203568	Washer	44	39-169	Screw
	(277336	Bendix Drive	45	203524	Terminal
	Assembly)		46	277327	Connector
14	277337	End Plate Assembly	47	203527	Terminal
15	*	(277311 Starter Motor	48	277326	Cable Assembly -
		Assembly Complete)			Motor to Junction
16	302054	Nut			Box
17	277332	Head Band Assembly	49	203510	Stud
18	19-124	Lockwasher	50	203506	Mounting Bracket
19	303808	Screw	51	277317	Solenoid Assembly -
20	203530	Frame Screw			Starter Switch
21	19-124	Lockwasher	52	303783	Nut
22	303932	Nut	53	7-227	Lockwasher
23	303951	Screw	54	203523	Terminal
24	376323	Mercury Switch	55	203525	Terminal
		Assembly	56	120052	Lockwasher
25	203529	Terminal	57	85-64	Nut
26	303806	Tubing	58	7-227	Lockwasher
27	203529	Terminal	59	203532	Wing Nut
28	510193	Screw	60	39-169	Screw
29	203525	Terminal	61	277324	Battery Terminal
30	277338	Switch Assembly -			Assembly
		Choke	62	277323	Cable Assembly -
30	277377	Switch Assembly -			Battery to Starter
		Starter			Solenoid
31	203512	Terminal	63	203512	Terminals
32	203550	Lockwasher	64	277325	Cable Assembly -
33	91-373	Screw			Switch Plate to
34	203511	Wing Nut			Junction Box
35	376329	Junction Box Cover		**203526	Cable Assembly -
		and Decal Assembly			less Terminals


*Contact your Auto-Lite dealer for service on the armature assembly, thrust washer - armature - upper and lower, frame and field assembly, and commutator end head assembly.

NOTE Always request marine treated parts from your Auto-Lite dealer.

**Same as cable assembly #277325 (Photo #64) less terminals—available only in 100 foot lengths.

Order All Parts from Nearest Service Station or Dealer

STARTER GROUP

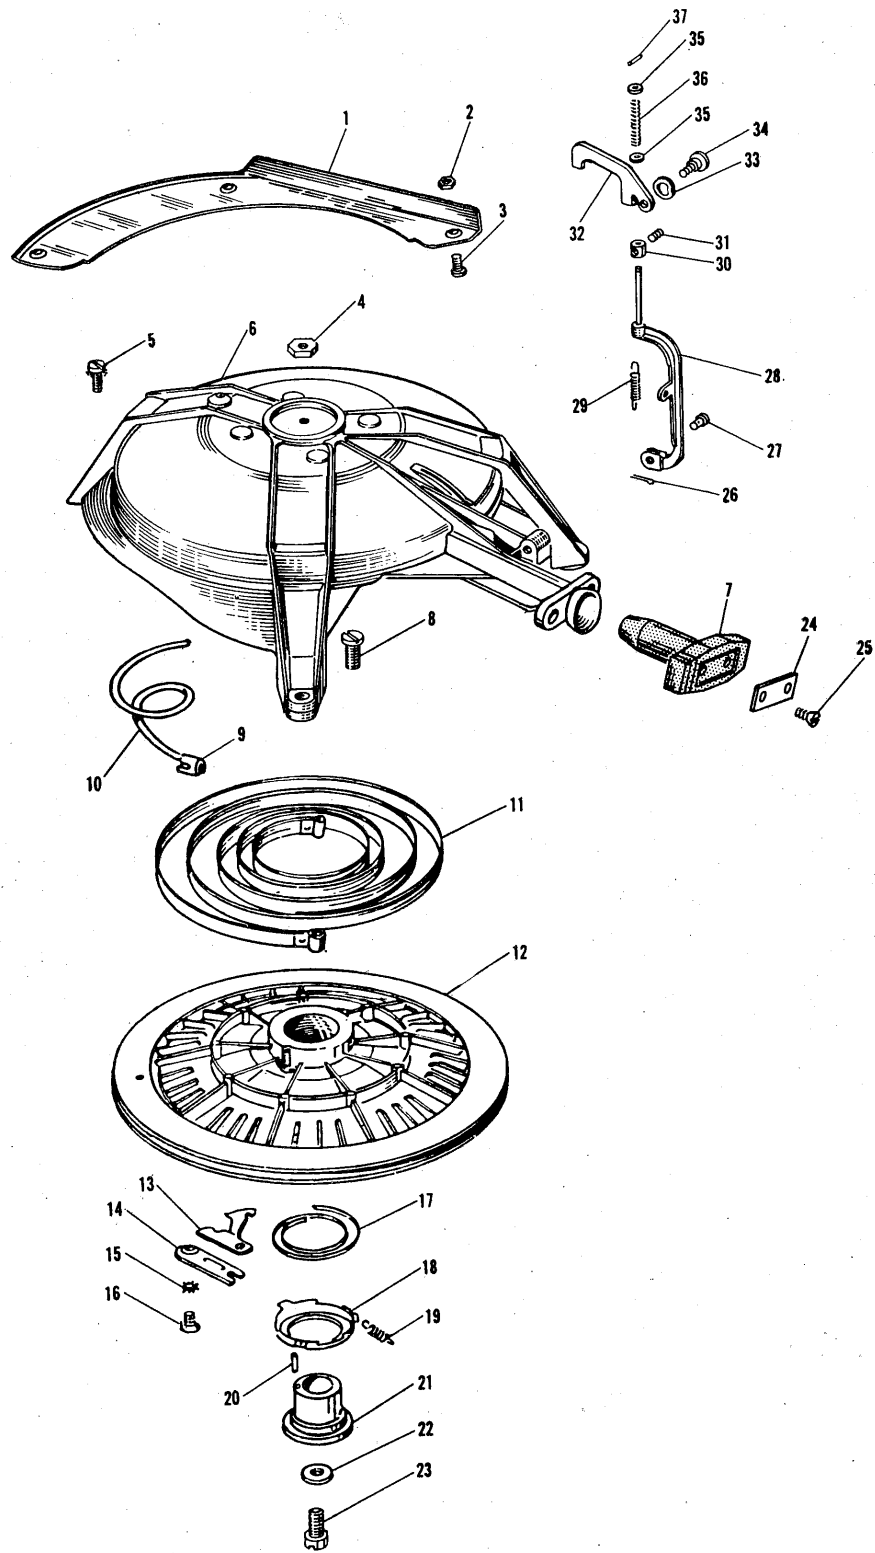

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts

PHOTO AND PART NUMBERS FOR STARTER GROUP


Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	303703	Guard	19	202155	Spring
2	71-1102	Nut	20	202156	Pin
3	302104	Screw	21	276643	Spindle and Pin Assembly
4	302103	Nut	22	202356	Washer
5	303766	Screw	23	51-223	Screw
6	376288	Starter Housing and Pin Assembly	24	303516	Clamp Plate
	(376418	Starter Assembly Complete)	25	41-205	Screw
7	376132	Handle	26	303590	Cotter Pin
8	303591	Screw	27	303742	Pin
9	41-314	Anchor	28	376238	Link and Rod Assembly
10	*304096	Starter Rope	29	303032	Spring
11	375836	Starter Spring	30	303244	Collar
12	*376374	Starter Pulley	31	303245	Allen Screw
13	202470	Starter Pawl	32	303785	Locking Lever
14	203317	Retainer	33	302473	Bow Washer
15	71-1026	Lockwasher	34	303247	Screw
16	302104	Screw	35	71-1447	Washer
17	302222	Friction Spring	36	303051	Spring
18	202114	Equalizer Cup	37	41-110	Pin

*Model RDE and RDEL-17 Motors built prior to Serial No. 1229693 order like part:

Photo No.	Part No.	Name of Part
10	42-137	Starter Rope
12	375771	Starter Pulley

Order All Parts from Nearest Service Station or Dealer

MAGNETO GROUP

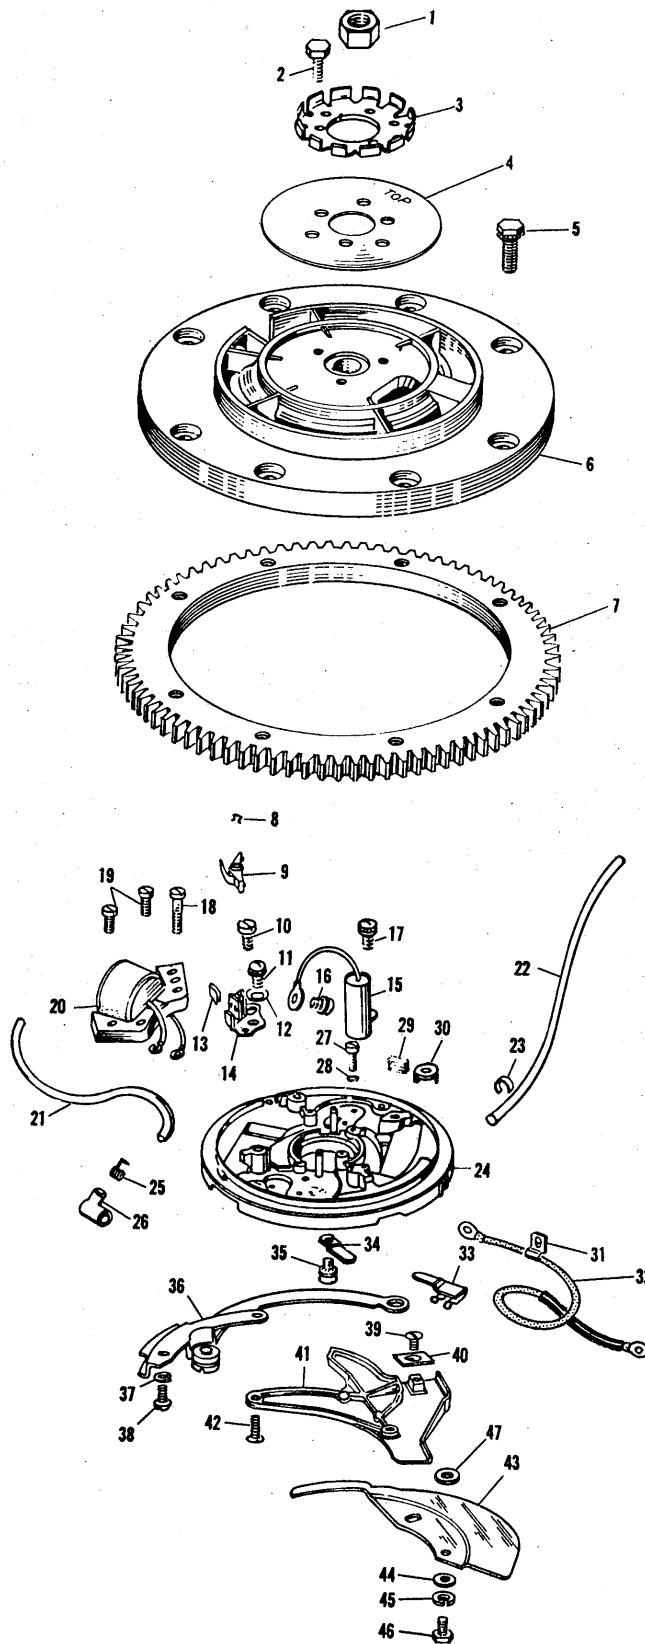

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts

PHOTO AND PART NUMBERS FOR MAGNETO GROUP

Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	71-1331	Nut	23	71-1239	Marker - High Tension
2	302468	Screw			Lead - Upper
3	202111	Ratchet	24	580168	Armature Plate and Post Assembly
4	303249	Cover		(580180	Armature Plate Assembly Complete)
5	303698	Screw	25	510231	Terminal
6	580177	Flywheel Assembly (less ring gear)	26	510232	Cover
7	203486	Ring Gear (376195 Flywheel and Ring Gear Assembly)	27	510192	Screw
8	71-1052	Clip	28	3-28	Lockwasher
9	580174	Breaker Arm (580176 - Breaker Assembly Complete)	29	510189	Oiler Wick
10	510185	Eccentric Screw	30	510188	Oiler Clip
11	510278	Screw	31	510267	Bracket
12	510208	Bow Washer	32	580181	Cutout Lead Assembly
13	510204	Clip	33	303146	Spring Clip
14	580173	Breaker Base (580176 Breaker Assembly Complete)	34	510190	Clamp
15	510173	Condenser	35	510193	Screw
16	510194	Screw	36	376328	Stop and Link Assembly
17	510193	Screw	37	71-1487	Lockwasher
18	510191	Screw	38	302812	Screw
19	510195	Screw	39	302751	Screw
20	580118	Coil and Lamination Assembly	40	303741	Clamp
21	510210	High Tension Lead - Lower (580135 High Tension Lead Assembly - Lower)	41	303849	Anchor - High Tension Lead
22	510203	High Tension Lead - Upper (580146 High Tension Lead Assembly - Upper)	42	302104	Screw
			43	303731	Throttle Cam
			44	71-1531	Washer
			45	71-1487	Lockwasher
			46	302750	Screw
			47	303952	Washer

Order All Parts from Nearest Service Station or Dealer

CARBURETOR GROUP


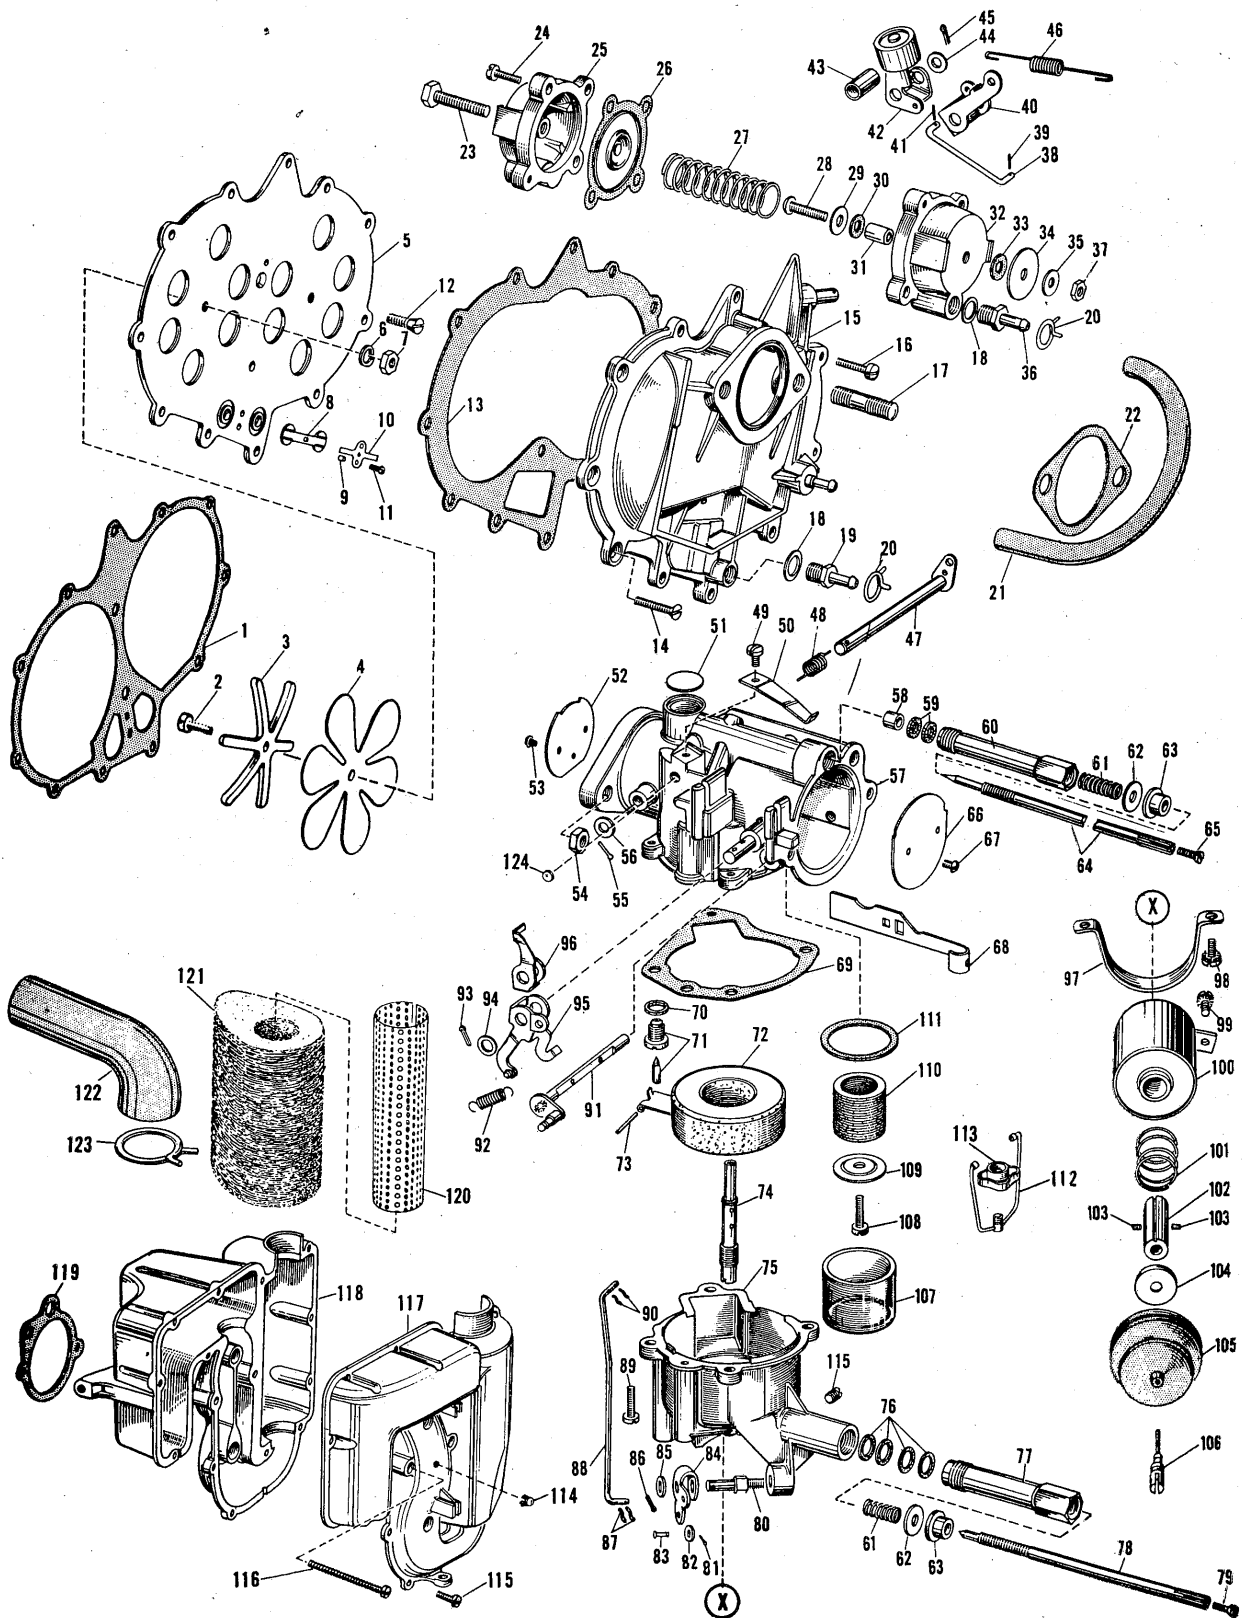


PHOTO AND PART NUMBERS FOR CARBURETOR GROUP

Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	302606	Gasket	64	303966	Needle Valve - Slow Speed
2	301858	Screw	65	551517	Screw
3	303732	Leaf Stop	66	302674	Choke Valve
4	303731	Leaf Valve	67	303760	Screw
5	302547	Leaf Plate	68	303964	Choke Rod
	(277117 Leaf Plate Assembly)		69	303750	Gasket
6	71-1487	Lockwasher	70	301996	Washer
7	85-64	Nut	71	375798	Float Valve and Seat Assembly
8	302042	Check Valve	72	375792	Float and Arm Assembly
9	302046	Spacer	73	302661	Hinge Pin
10	302048	Spring	74	303968	Nozzle
11	19-191	Screw	75	304031	Float Chamber
12	302104	Screw	76	43-123	Packing
13	302605	Gasket	77	303981	Nut - High Speed Needle Valve
14	200399	Screw	78	303965	Needle Valve - High Speed
15	376197	Intake Manifold and Stud Assembly	79	551517	Screw
16	43-110	Screw	80	303739	Pivot Shaft
17	302822	Stud	81	301912	Cotter Pin
18	303630	Washer	82	71-1447	Washer
19	303638	Nipple	83	303738	Pin
20	302647	Clamp	84	303747	Lever
21	203286	Hose	85	85-54	Washer
22	302598	Gasket	86	41-163	Cotter Pin
23	302479	Screw	87	41-110	Pin
24	1-132	Screw	88	303734	Link
25	303733	Bcdy	89	13-558	Screw
26	375807	Diaphragm and Plate Assembly	90	41-110	Pin
27	302733	Spring	91	376256	Choke Shaft, Arm and Pin Assembly
28	303724	Screw	92	303781	Spring
29	71-431	Washer	93	41-163	Cotter Pin
30	510126	Washer	94	85-54	Washer
31	303893	Tubing	95	376255	Bellcrank and Pin Assembly
32	303733	Body	96	303749	Lever
	(376237 Cutout Switch Assembly)		97	303740	Yoke
33	510126	Washer	98	303737	Screw
34	303723	Washer	99	510193	Screw
35	71-1531	Washer	100	376222	Solenoid Assembly
36	303638	Nipple	101	303745	Spring
37	130450	Nut	102	303751	Plunger
38	303272	Link	103	303752	Socket Set Screw
39	41-110	Pin	104	303736	Retainer
40	303280	Throttle Lever	105	303792	Cover
41	41-110	Pin	106	376241	Cable and Solenoid Shaft Assembly
42	376035	Cam Follower	107	303967	Bowl
43	303310	Spacer	108	13-558	Screw
44	301827	Washer	109	302060	Retainer
45	41-163	Cotter Pin	110	302062	Filter
46	303296	Spring	111	302675	Gasket
47	376239	Throttle Shaft and Arm Assembly	112	376327	Yoke and Screw Assembly
48	302696	Spring	113	375989	Thumb Nut and Swivel Cup Assembly
49	43-156	Screw	114	203652	Button Plug
50	302722	Spring	115	25-74	Screw
51	19-51	Core Plug	116	303994	Screw
52	304056	Throttle Valve	117	203575	Air Silencer - Front
53	303760	Screw	118	203576	Air Silencer - Rear
54	7-46	Nut	119	303988	Gasket
55	41-163	Cotter Pin	120	203581	Insert Tube
56	85-54	Washer	121	203582	Acoustical Liner
57	376417	Carburetor Body and Plug Assembly	122	203583	Inlet Tube
	(376325 Carburetor and Solenoid Assembly Complete)		123	203579	Clamp
58	303939	Bushing	124	303962	Core Plug
59	43-123	Packing			
60	303982	Nut - Slow Speed Needle Valve			
61	304142	Spring			
62	202065	Washer			
63	303535	Grommet			

POWERHEAD GROUP

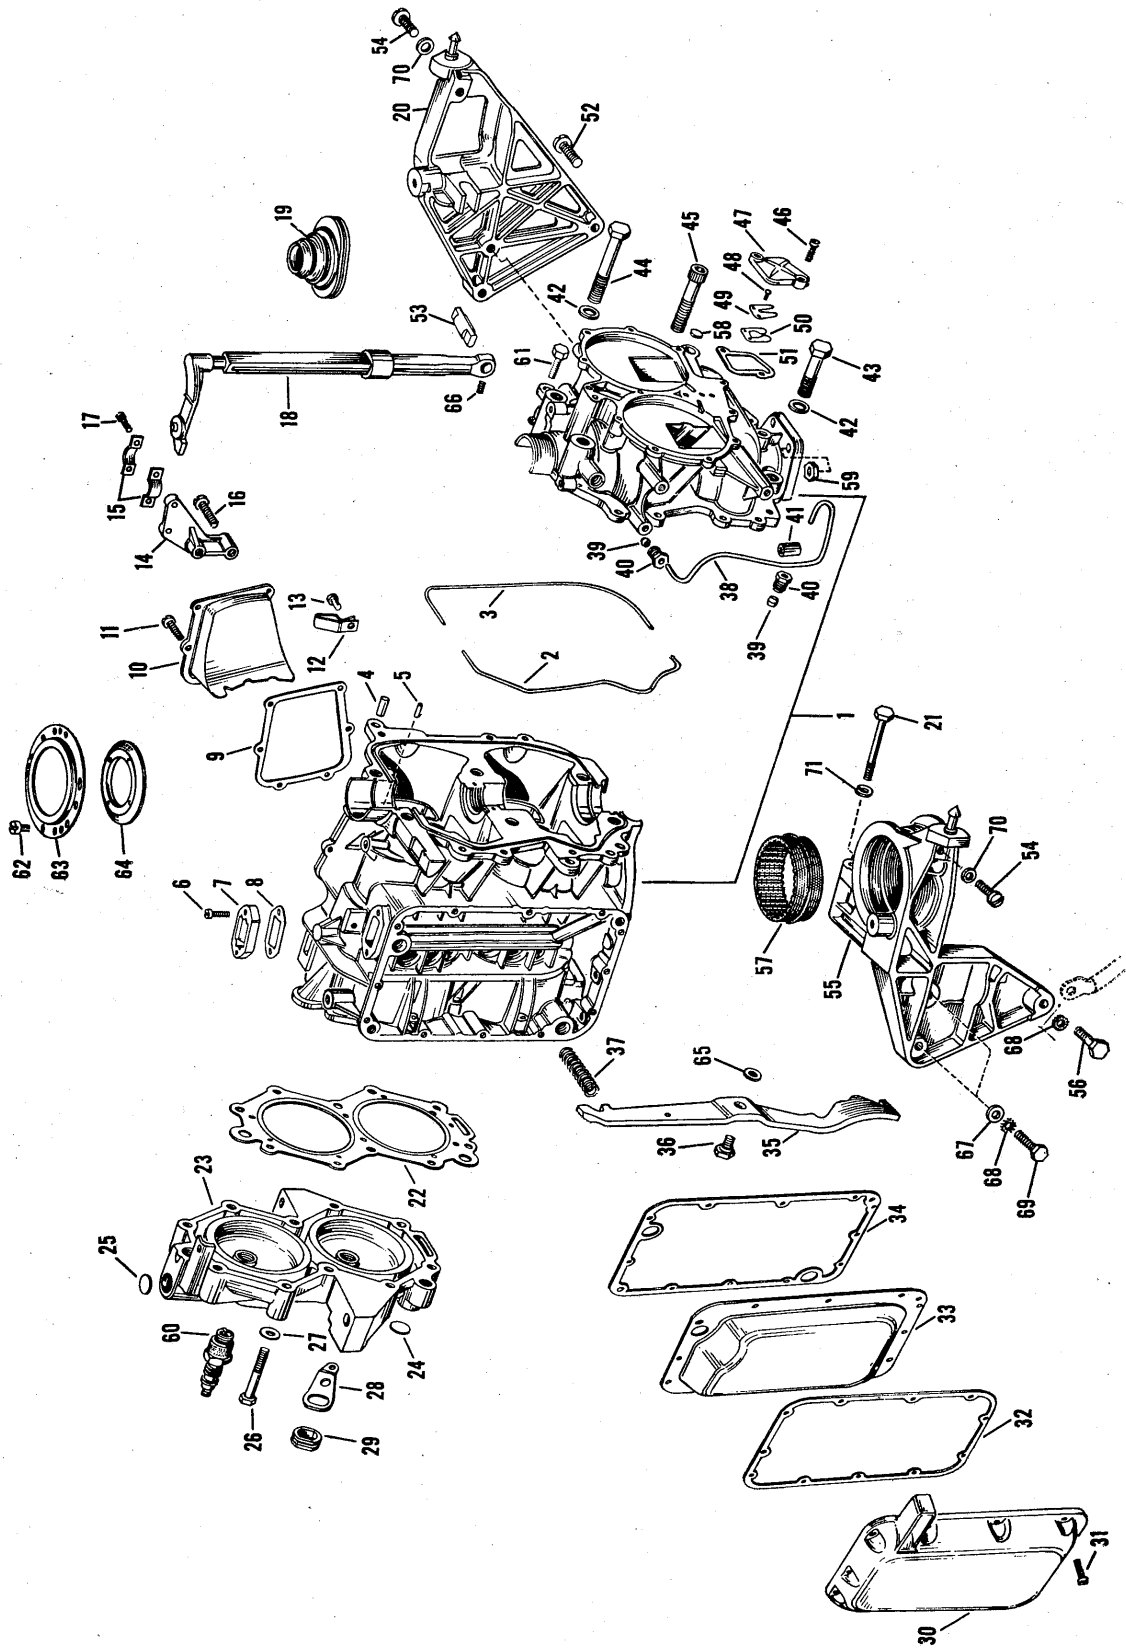

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts

PHOTO AND PART NUMBERS FOR POWERHEAD GROUP


Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	375786	Cylinder and Crankcase	38	375862	Oil Line Assembly
2	302621	Seal	39	11-61	Gland
3	302622	Seal	40	41-105	Packing Nut
4	300402	Tapered Pin	41	302811	Spacer
5	302037	Dowel	42	300343	Washer
6	1-132	Screw	43	302600	Screw
7	302582	Cover	44	301431	Screw
8	302581	Gasket	45	302579	Screw
9	302586	Gasket	46	13-558	Screw
10	302542	Cover	47	302033	Cover
11	43-259	Screw	48	19-191	Screw
12	302749	Clamp	49	302034	Plate
13	302824	Screw	50	302031	Leaf Plate
14	303832	Bracket	51	302032	Gasket
15	303109	Bearing Clamp	52	21-124	Screw
16	25-238	Screw	53	304155	Pin
17	43-156	Screw	54	132679	Screw
18	**304156	Lever	55	376300	Bracket and Pin Assembly - Star
19	304019	Grommet	56	21-358	Screw
20	376301	Bracket and Pin Assembly - Port	57	303763	Shock Absorber
21	21-487	Screw	58	300788	Expansion Plug
22	302583	Gasket	59	7-46	Nut
23	376336	Cylinder Head	60	*200322	Spark Plug
24	13-426	Core Plug	60	*376290	Champion J6J Spark Plug - Auto-Lite A3X
25	19-51	Core Plug	61	300646	Screw
26	303782	Screw	62	41-223	Screw
27	37-154	Washer	63	303278	Support
28	300455	Anchor	64	303277	Retaining Ring
29	300454	Grommet	65	304051	Washer
30	302550	Cover	66	303236	Spring
31	43-110	Screw	67	13-585	Washer
32	302608	Gasket	68	51-137	Lockwasher
33	302549	Cover	69	300646	Screw
34	302607	Gasket	70	43-302	Washer
35	302609	Shifter Lock	71	7-227	Lockwasher
36	302592	Screw			
37	302587	Spring			

*We recommend either Champion or Auto-Lite Spark Plugs.

**Model RDE and RDEL-17 Motors built prior to Serial No. 1219876 order part No. 376429.

Order All Parts from Nearest Service Station or Dealer

CRANKSHAFT PISTON AND CONNECTING ROD GROUP

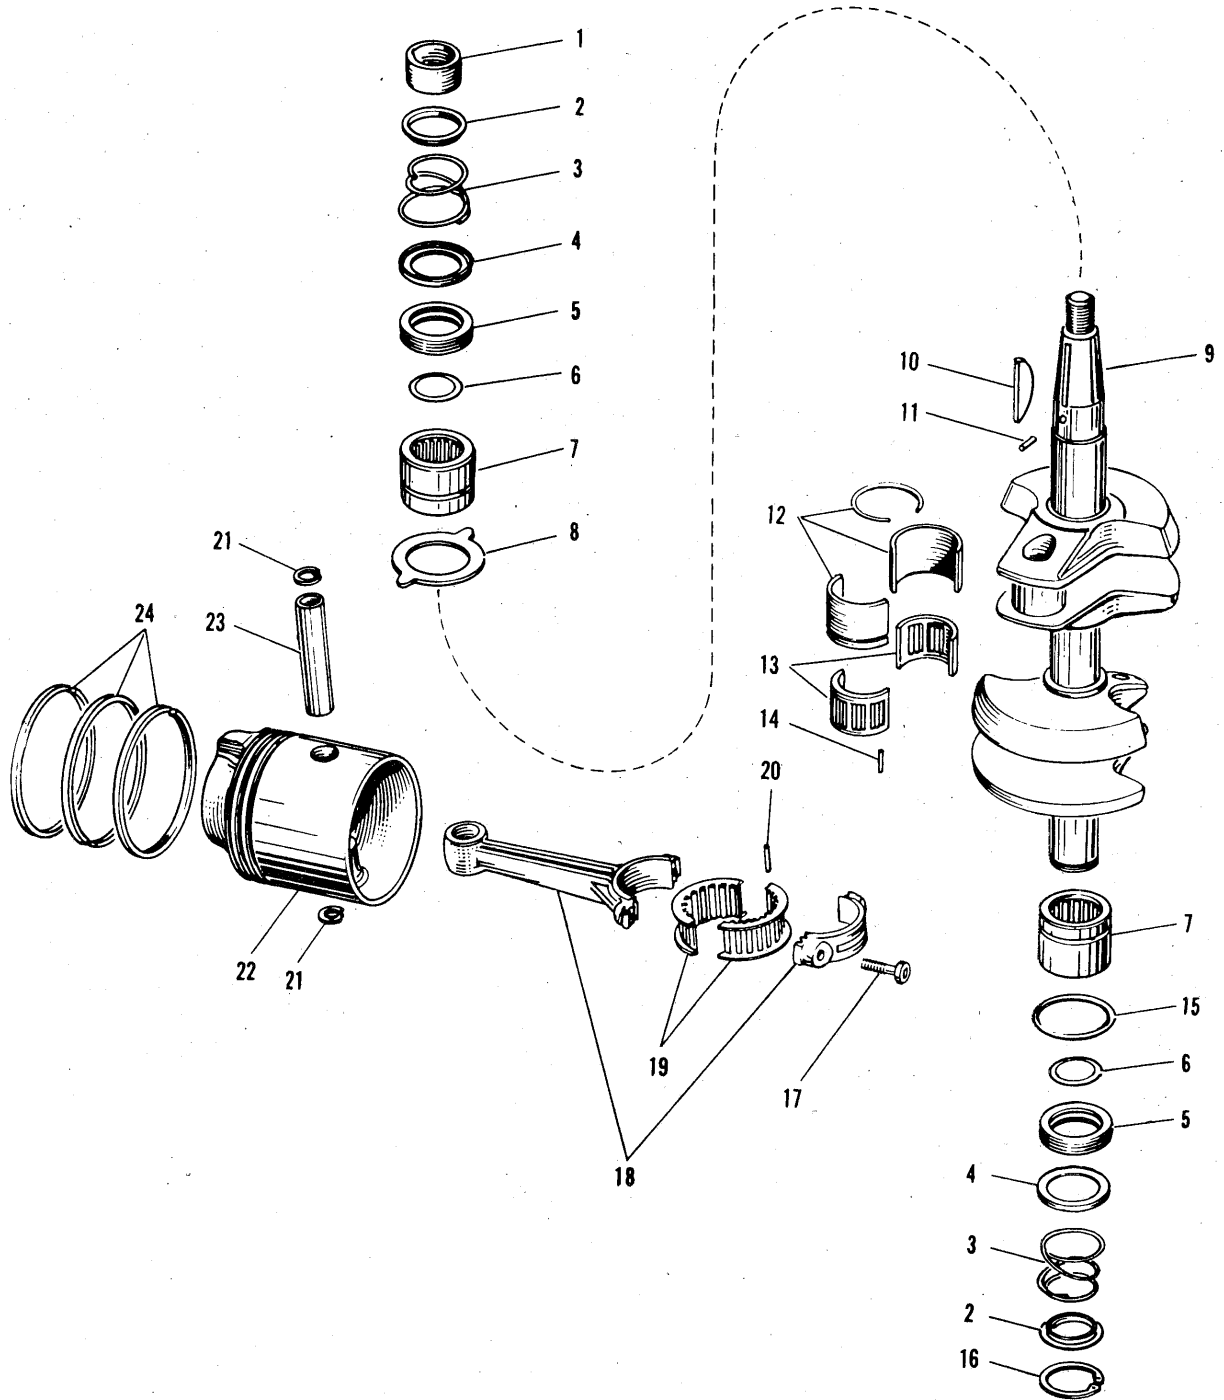


Be Sure to Specify Model and Serial Number of Motor When Ordering Parts

PHOTO AND PART NUMBERS FOR CRANKSHAFT, PISTON
AND CONNECTING ROD GROUP

Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	510169	Cam	15	302537	O-Ring
2	303801	Retaining Washer	16	302536	Retaining Ring
3	302539	Spring	17	202967	Screw
4	302594	Retaining Washer	18	375767	Connecting Rod
5	302538	Seal	19	302603	Retainer
6	302540	O-Ring	20	302529	Needle Bearing
7	375763	Roller Bearing	21	302577	Spring Ring
8	302601	Thrust Washer	22	375781	Piston and Dowel Pin
9	203655	Crankshaft		(375772	Piston and Connecting Rod Assembly, with Rings)
10	302602	Key	23	302576	Wrist Pin
11	302578	Pin	24	302533	Piston Ring
12	302585	Split Sleeve			
13	302755	Bearing Cage			
14	302584	Needle Bearing			

Order All Parts from Nearest Service Station or Dealer

LOWER UNIT AND STEERING HANDLE GROUP

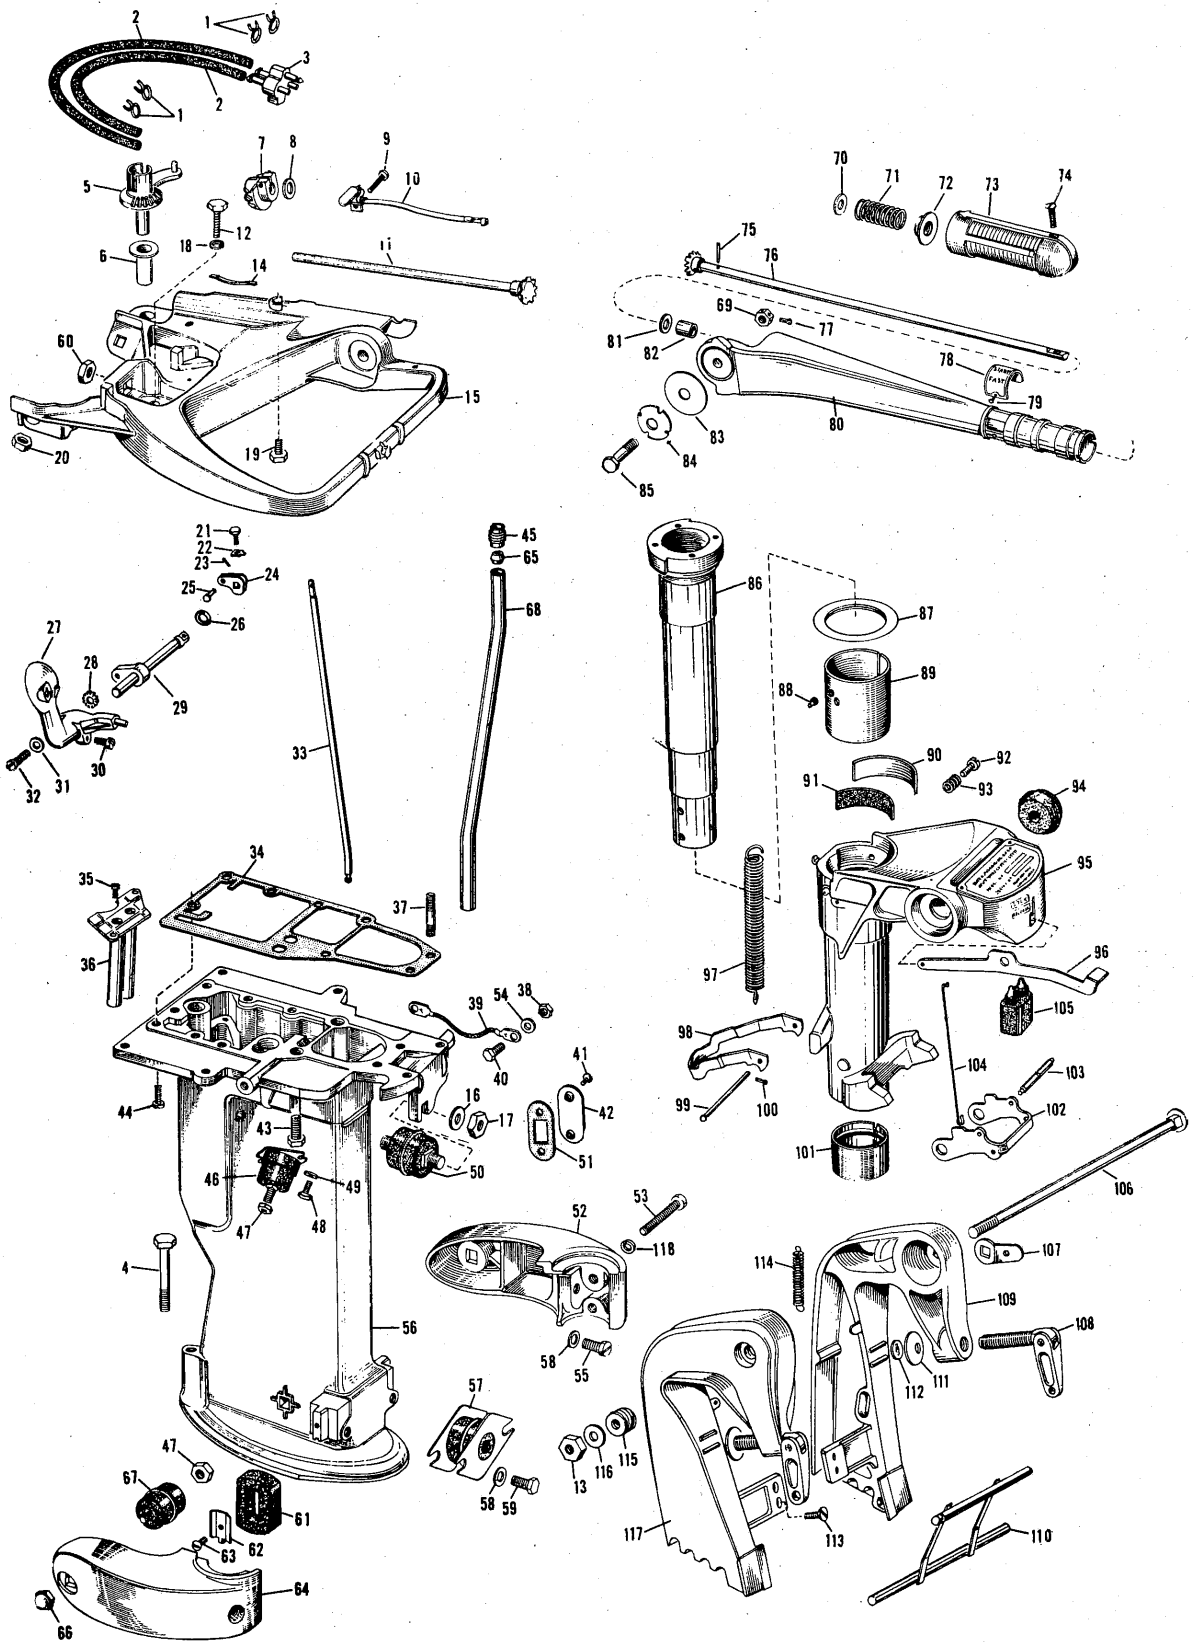

**PHOTO AND PART NUMBERS FOR LOWER UNIT
AND STEERING HANDLE GROUP**

Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	302647	Clamp	59	303888	Screw
2	304029	Hose	60	303912	Nut
3	375788	Body Assembly	61	303918	Bumper
4	302871	Screw	62	303961	Retainer
5**	304157	Gear	63	303393	Screw
6	303854	Bushing	64	303915	Housing - Star
7	303142	Pinion	65	7-170	Gland
8	303107	Washer	66	303890	Acorn Nut
9	303951	Screw	67	303880	Rubber Mount
10	376323	Mercury Switch Assembly	68	303872	Water Tube
11	376296	Gear and Shaft Assembly - Short	69	302803	Nut
12	304151	Screw	70	303252	Washer
13	17-182	Nut	71	301656	Spring
14	304076	Ground Spring	72	303282	Friction Block
15	376298	Steering Bkt. and Bushing Assembly	73	303213	Grip
16	303913	Washer	74	302710	Screw
17	303912	Nut	75	302709	Groove Pin
18	19-124	Lockwasher	76	376414	Gear and Shaft Assembly - Long
19	303311	Screw	77	302804	Cotter Pin
20	303889	Nut	78	302735	Plate
21	303722	Screw	79	301992	Stud
22	303721	Clip	80	376040	Steering Handle
23	301912	Cotter Pin	81	302712	Washer
24	303720	Lever	82	302717	Bushing
25	302504	Pin	83	302703	Thrust Washer
26	303191	O-ring	84	302631	Spring Washer
27	375766	Shift Lever	85	302721	Screw
28	51-137	Lockwasher	86	303906	Pilot Shaft
29	376287	Bracket and Shaft Shift Lever Assembly	87	303867	Thrust Washer
30	21-167	Screw	88	303696	Pin
31	21-165	Washer	89	303936	Liner
32	300646	Screw	90	303928	Plate
33	303870	Shift Rod - Upper	91	303929	Spacer
34	303974	Gasket	92	41-178	Screw
35	303393	Screw	93	551113	Spring
36	376330	Exhaust Loading Tube Assembly	94	302637	Conical Washer
37	15-149	Stud	95	303885	Swivel Bracket
38	13-82	Nut	96	303863	Arm
39	376349	Ground Lead Assembly	97	303971	Spring
40	304077	Screw	98	303954	Locking Lever
41	302509	Screw	99	303955	Rod
42	303862	Cover Plate	100	15-268	Cotter Pin
43	300355	Screw	101	303868	Liner
44	132679	Screw	102	303957	Link
45	302894	Gland Nut	103	303956	Shaft
46	303879	Rubber Mount	104	303953	Link
47	303889	Nut	105	303933	Bumper
48	39-176	Screw	106	302643	Bolt
49	303887	Washer	107	300364	Link
50	303882	Rubber Mount	108	375747	Clampscrow & Handle Assembly
51	304023	Gasket	109	376304	Stern Bracket & Clampscrow Assem- bly - Port
52	303914	Housing - Port	110	376303	Tilting Lever Assembly
53	303898	Screw	111	41-48	Swivel Plate
54	301827	Washer	112	302420	Retainer
55	303883	Screw	113	11-185	Screw
56	376428	Exhaust Housing, Water Tube & Stud Assembly	114	302736	Spring
57	303881	Rubber Mount	115	302051	Spring
58	303886	Washer	116	25-196	Washer
			117	376305	Stern Bracket & Clampscrow Assem- bly - Star
			118	304144	Lockwasher


MODEL RDEL-17 PARTS THAT DIFFER FROM MODEL RDE-17

4	304135	Screw (RDEL)	68	304035	Water Tube (RDEL)
---	--------	--------------	----	--------	-------------------

See page 21 for additional Model RDEL-17 parts

**Model RDE and RDEL-17 Motors built prior to Serial No. 1219876 order part No. 376429.

GEARCASE ASSEMBLY GROUP

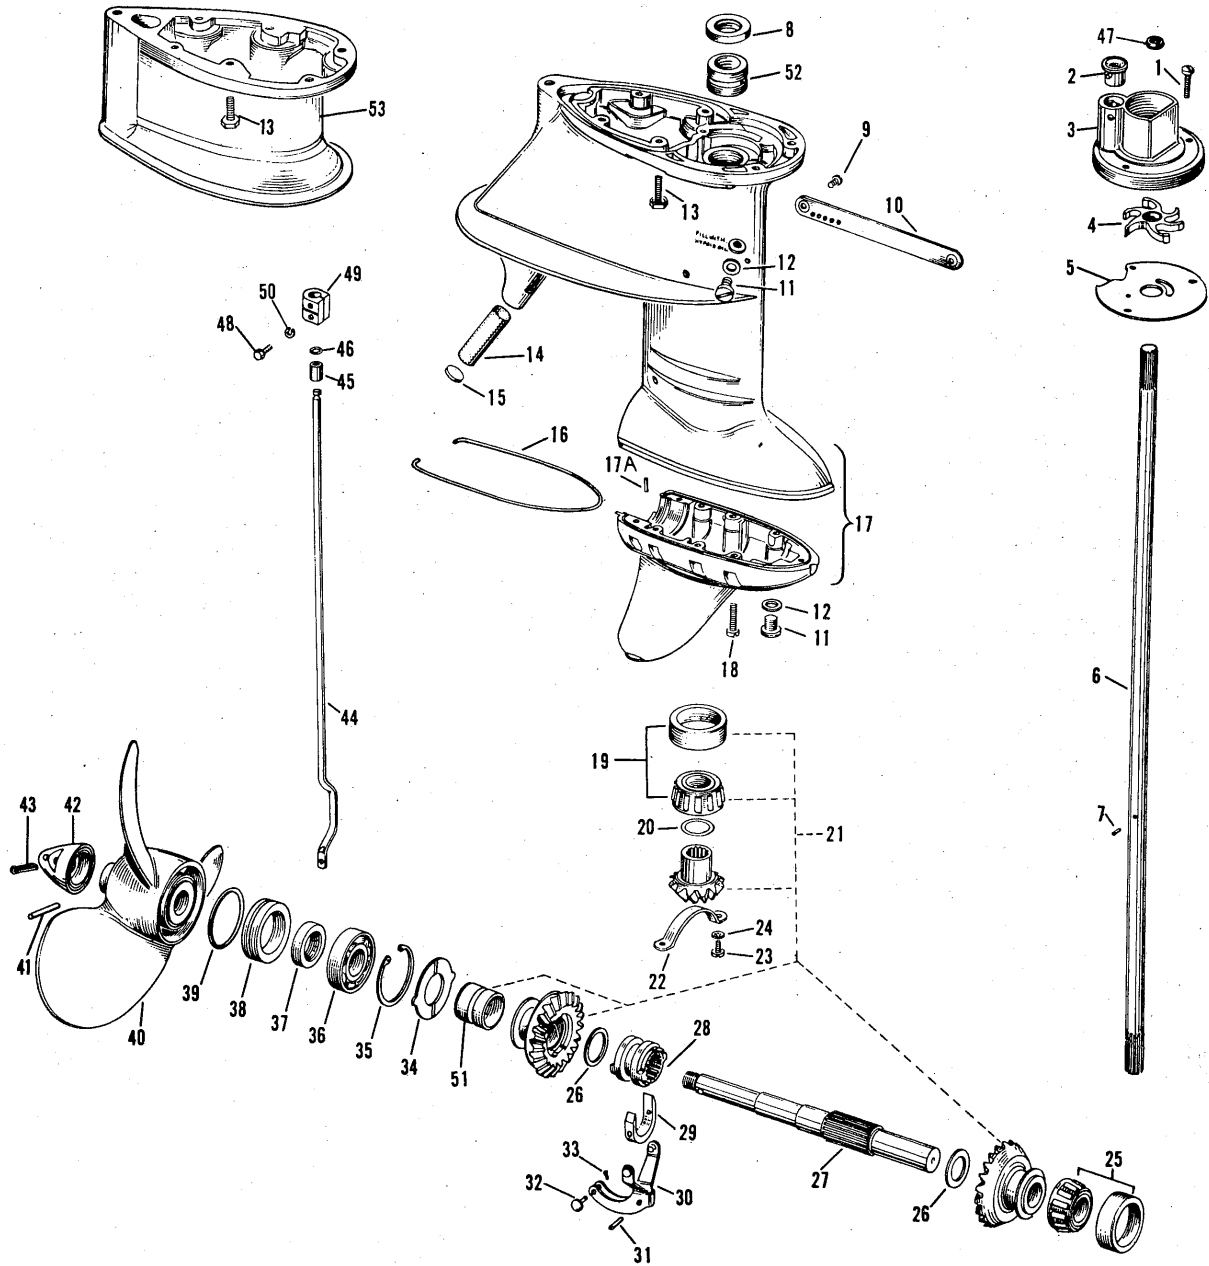

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts

PHOTO AND PART NUMBERS FOR GEARCASE ASSEMBLY GROUP

Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	302677	Screw	23	43-147	Screw
2	304026	Grommet	24	71-915	Lockwasher
3	303831	Impeller Housing	25	375761	Roller Bearing
4	375808	Impeller	26	302565	Thrust Washer
5	303866	Plate	27	302522	Propeller Shaft
6	303871	Driveshaft	28	375783	Shifter Clutch Dog
	(RDEL)	Extension Parts	29	302650	Cradle
		Listed Below)	30	375787	Shifter Lever and
7	300771	Pin			Pin
8	302545	Oil Retainer	31	302501	Pin
9	302509	Screw	32	302504	Pin
10	302616	Cover	33	301912	Cotter Pin
11	27-283	Screw	34	302743	Thrust Washer
12	27-284	Washer	35	302528	Retaining Ring
13	302510	Screw	36	20-52	Ball Bearing
14	302521	Screen	37	302564	Oil Retainer
15	300077	Plug	38	303050	Housing
16	302604	Seal	39	302588	O-Ring
17	376405	Gearcase and	40	375790	Propeller
		Bearing	41	302566	Drive Pin
17A	300611	Dowel Pin	42	375773	Propeller Nut
18	33-76	Screw	43	19-84	Cotter Pin
19	375829	Roller Bearing	44	303869	Shift Rod - Lower
20	302796	Shim (.004)	45	301878	Bushing
20	302797	Shim (.008)	46	301877	O-Ring
20	302798	Shim (.010)	47	303059	O-Ring
20	302823	Shim (.006)	48	304024	Screw
21	375861	Gears and Pinion	49	303794	Connector
		Bearing	50	301551	Lockwasher
22	302552	Support	51	303690	Bushing
			52	304084	Bushing


MODEL RDEL-17 PARTS THAT DIFFER FROM MODEL RDE-17

Photo No.	Part No.	Name of Part
6	304033	Driveshaft (RDEL)
13	302510	Screw (RDEL)
44	304034	Shift Rod - Lower (RDEL)
53	304030	Extension (RDEL)

See page 19 for additional Model RDEL-17 parts.

Order All Parts from Nearest Service Station or Dealer

MILE MASTER FUEL TANK ASSEMBLY

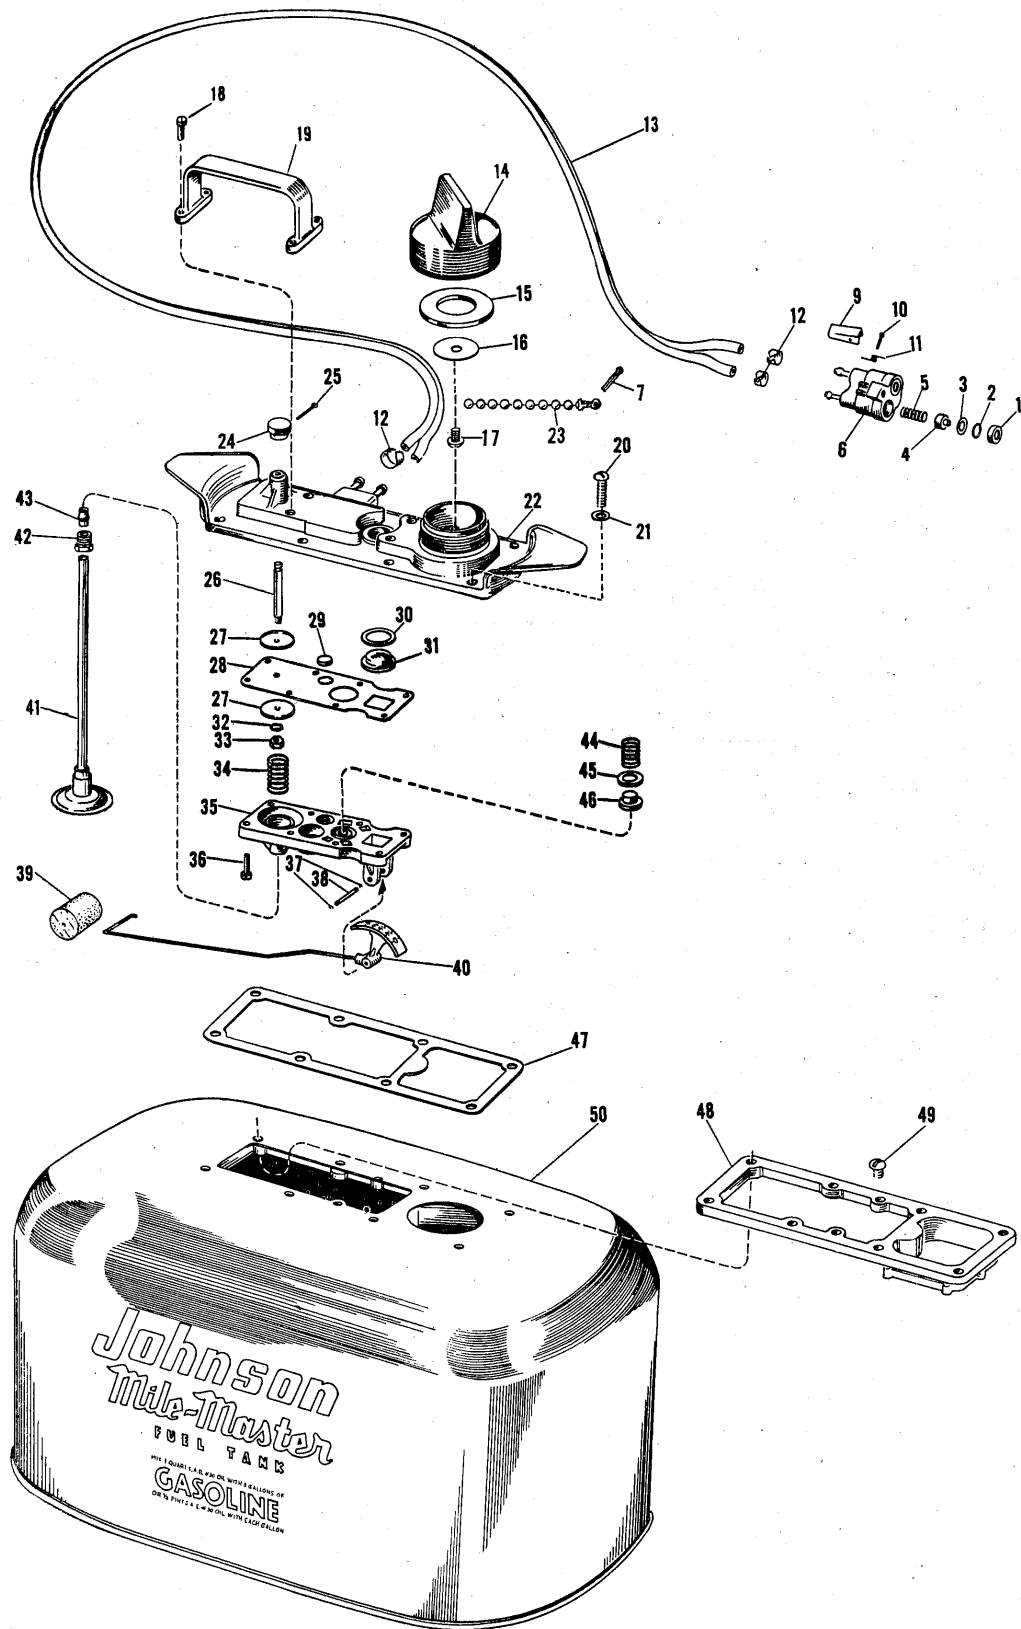

Be Sure to Specify Model and Serial Number of Motor When Ordering Parts

PHOTO AND PART NUMBERS FOR MILE MASTER
FUEL TANK ASSEMBLY

Photo No.	Part No.	Name of Part	Photo No.	Part No.	Name of Part
1	301828	Retainer	27	301800	Support
2	301824	O-Ring	28	302563	Diaphragm
3	301827	Washer	29	301802	Disc Valve
4	301826	Valve	30	302571	Seal
5	301825	Spring	31	302568	Glass
6	375587	Fuel Connector Assembly	32	301736	Lockwasher
7	15-213	Cotter Pin	33	21-195	Nut
9	301830	Lock	34	301803	Spring
10	301832	Rivet	35	302555	Housing
11	301829	Spring	36	13-558	Screw
12	301822	Hose Clamp	37	302654	Snap Ring
13	301821	Hose	38	302653	Pin
14	375817	Filler Cap As- sembly	39	302559	Float
15	301835	Gasket	40	375778	Indicator Assembly
16	302560	Plate	41	375846	Foot Valve Assembly
17	301837	Screw	42	132691	Nut
18	13-558	Screw	43	13-304	Gland
19	302570	Handle	44	302135	Spring
20	304137	Screw	45	302137	Washer
21	301814	Gasket	46	302136	Valve
22	376276	Housing	47	302557	Gasket
23	301838	Chain	48	302556	Support
24	301815	Push Button	49	53-85	Screw
25	17-186	Cotter Pin	50	375774	Fuel Tank (Only)
26	302561	Push Rod		(375777 Fuel Tank Assembly Complete	

Order All Parts from Nearest Service Station or Dealer

